

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05004 (A/B-TYPE)

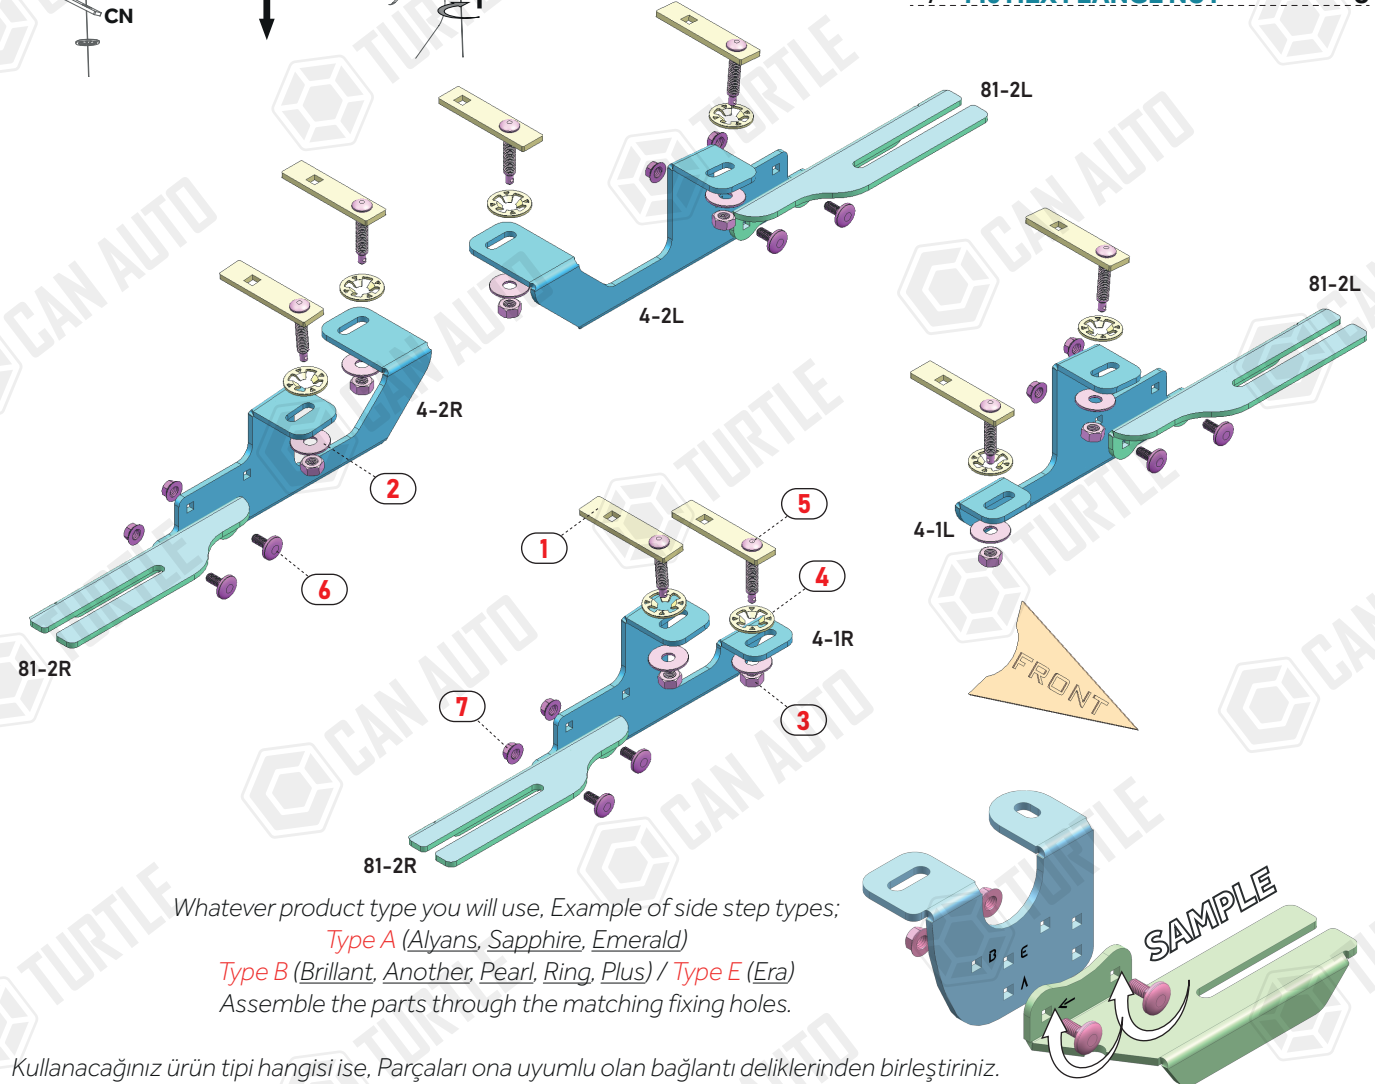
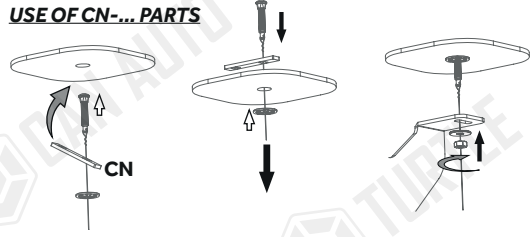
COMPATIBLE VEHICLES

AUD Q5 (8R) SUV 09-17

PACKAGE INCLUDED

1-	CN-02 M8	8
2-	D8 WASHER	8
3-	M8 HEX NUT	8
4-	D8 CLAMPING PIECE	8
5-	M8 SPECIAL BOLT	8
6-	M6x15 LOCK HEADED BOLT	8
7-	M6 HEX FLANGE NUT	8

ZIPLOCK BAG

USE OF CN-... PARTS

Whatever product type you will use, Example of side step types;

*Type A (Alyans, Sapphire, Emerald)**Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)*

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****FRONT**