



- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05084 (A/B-TYPE)



COMPATIBLE VEHICLES

- CTRN C-CRSSLR SUV 07-12
- MIT ASX (Mk3) SUV 10-
- MIT OTLNDR (Mk2) SUV 07-12
- MIT OTLNDR (Mk3) SUV 13-
- MIT OTLNDR SPORT (Mk3) SUV 10-
- MIT RVR (Mk3) SUV 10-
- PEU 4007 SUV 07-12
- PEU 4008 SUV 12-17

PACKAGE INCLUDED

1- CN-02 M8	12
2- M8 SPECIAL BOLT	12
3- CLAMPING PIECE	12
4- D8 WASHER	12
5- M8 HEX NUT	12
6- M6x15 LOCK HEADED BOLT	12
7- M6 HEX FLANGE NUT	12

USE OF CN-... PARTS

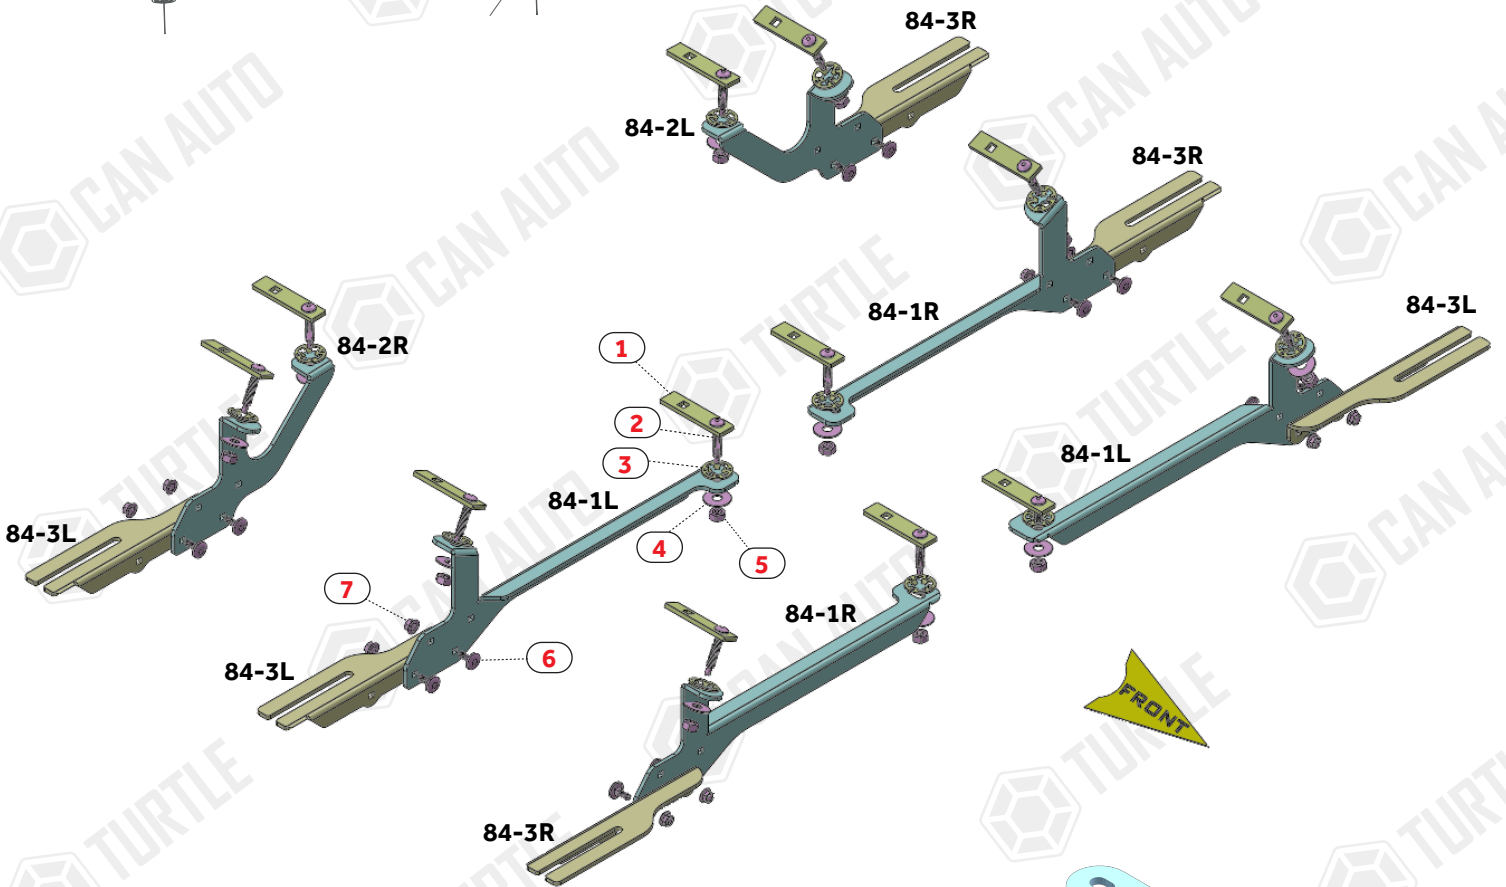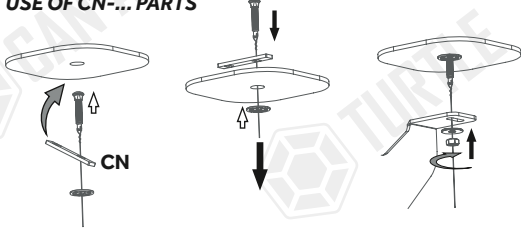


Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

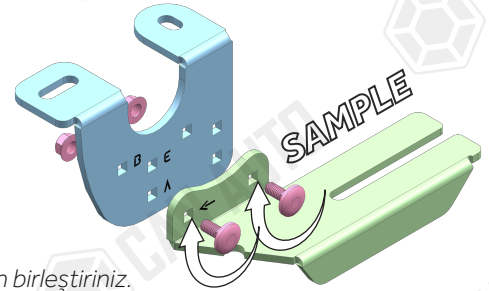

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.



MB05084 / Rev.01 / 13.01.2022 (KRST)