




**ASSEMBLY INSTRUCTIONS (BRACKET KIT)**  
Product Code: MB05097 (A/B/O-TYPE)

**USE OF CN-... PARTS**

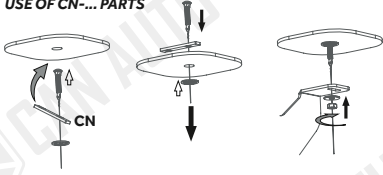


**COMPATIBLE VEHICLES**

CTRN C5 AIRCRSS SUV 18-  
OPL GRNLND X SUV 18-  
PEU 5008 (T87) SUV 17-  
VXHL GRNLND X SUV 18-  
PEU 3008 SUV 17-


**PACKAGE INCLUDED**

1- CN-03 M8	2
2- CN-34 M8	2
3- M8 SPECIAL BOLT	2
4- CLAMPING PIECE	4
5- D8 WASHER	12
6- M8 HEX NUT	8
7- M8x25 HEX BOLT	4
8- M6x15 LOCK HEADED BOLT	8
9- M6 HEX FLANGE NUT	8

ZIPLOCK BAG

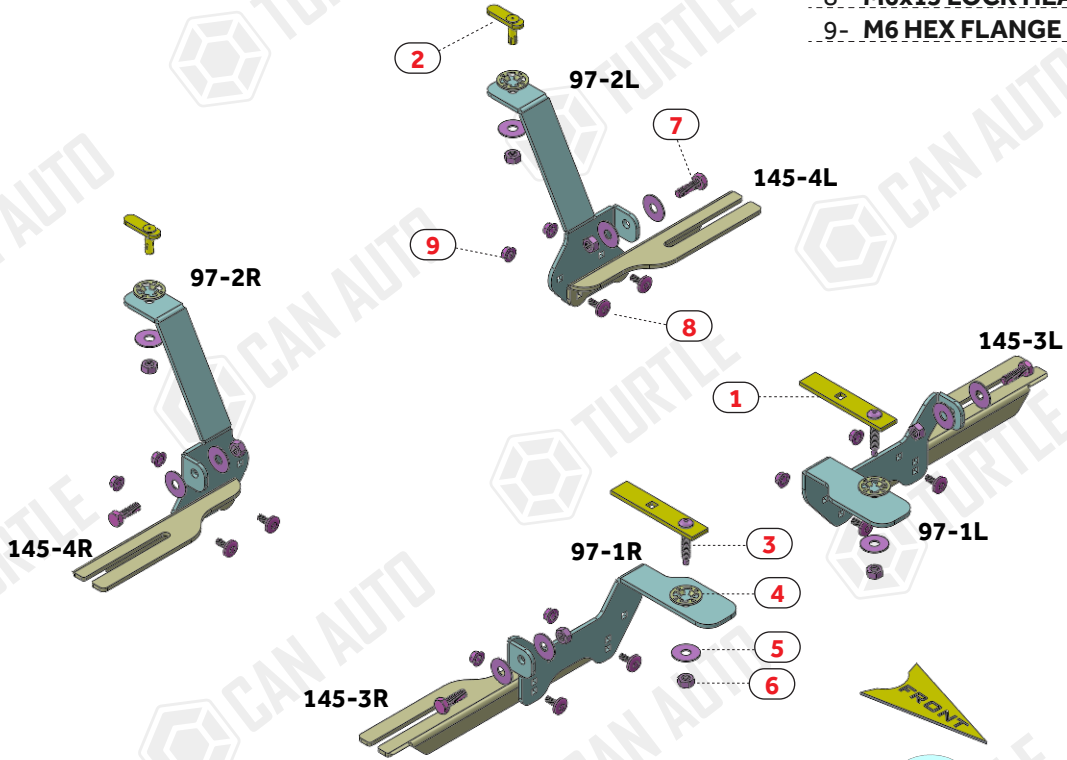

Whatever product type you will use, Example of side step types;  
Type A (Alyans, Sapphire, Emerald)  
Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)  
Assemble the parts through the matching fixing holes.

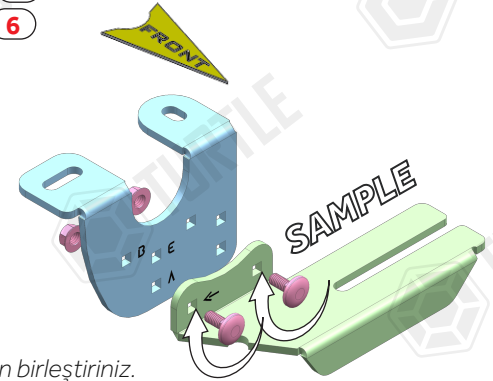

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

