




* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB06138 (B/E-TYPE)

USE OF CN-... PARTS

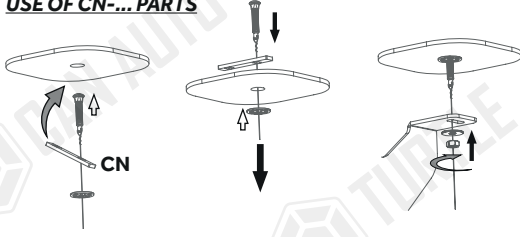

In Type E Assemble, on part 138-4;

* Use the hole marked with E1 on Rifter, E2 on other vehicles.

E-Type montajında, 138-4 numaralı parçada;

* Rifter'da E1, diğer araçlarda E2 ile işaretli deliği kullanınız.


COMPATIBLE VEHICLES

CTRN BRLNG VAN 19-
OPL CMB E VAN 19-
OPL CMB LIFE MPV 19-
PEU PRTRN VAN 19-
PEU RFTR MPV 19-
TYT PACE CITY VAN 19-
TYT PACE CITY VERS MPV 19-
VXHL CMB E VAN 19-
VXHL CMB LIFE MPV 19-

PACKAGE INCLUDED

1-	CN-02 M8	2
2-	CN-03 M8	2
3-	CN-08 M6	2
4-	CN-34 M8	2
5-	M8x20 HEX BOLT	4
6-	D8 WASHER	14
7-	M8 HEX NUT	10
8-	CLAMPING PIECE	4
9-	M8 SPECIAL BOLT	4
10-	M6x15 LOCK HEADED BOLT	12
11-	M6 HEX FLANGE NUT	14

ZIPLOCKBAG

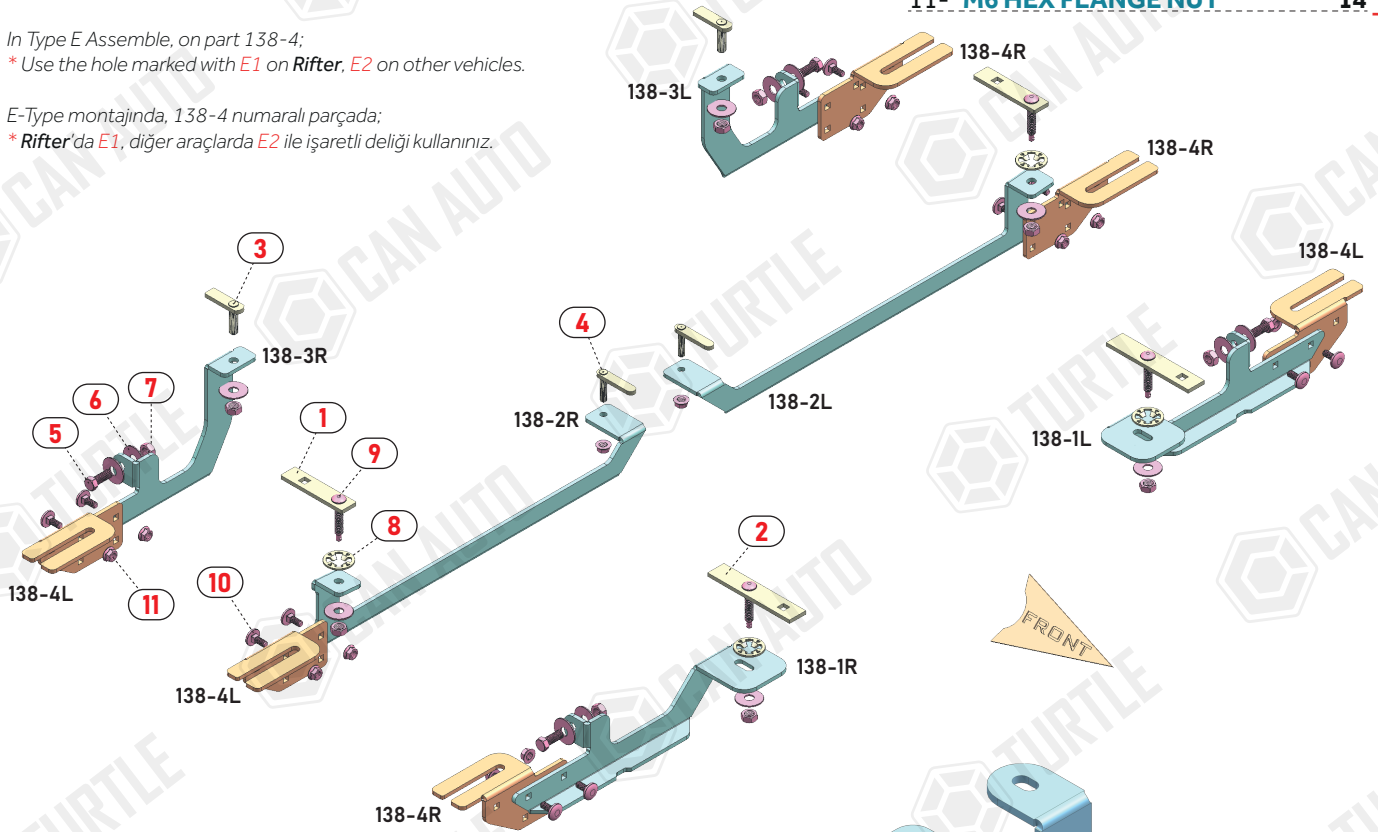

Whatever product type you will use, Example of side step types:

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

