

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05083 (A/B-TYPE)


COMPATIBLE VEHICLES

MBNZ XCLSS DOUBLE CAB 18-
NSS NVR (D40) DOUBLE CAB 04-14
NSS NVR (D23) DOUBLE CAB 15-
NSS NP3 (D23) DOUBLE CAB 15-
REN ALSKN DOUBLE CAB 17-
NSS PFNDR (R51) SUV 05-12
NSS PTRL (Y61) SUV 97-13

PACKAGE INCLUDED

1- D8 WASHER	12
2- M8 HEX NUT	12
3- M6x15 LOCK HEADED BOLT	12
4- M6 HEX FLANGE NUT	12

ZIPLOCK BAG

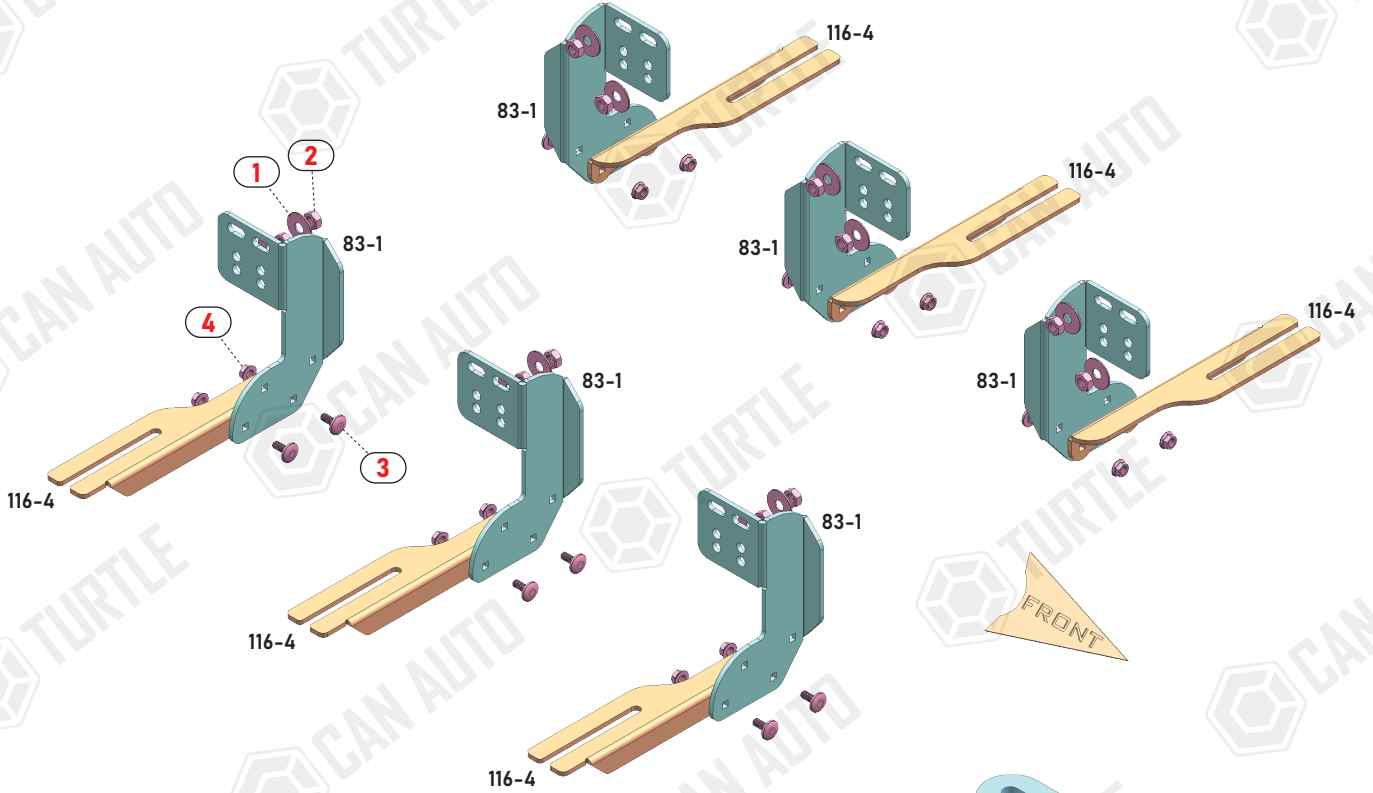

Whatever product type you will use, Example of side step types:

*Type A (Alyans, Sapphire, Emerald)**Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)*

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

