



* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT) Product Code: MB05129 (A/B-TYPE)



COMPATIBLE VEHICLES

SKD KDQ SUV 17-
VWGN T-RC SUV 17-
VWGN TGN SUV 07-16
VWGN TGN (5N) SUV 16-
VWGN TGN ALLSPC (5N) SUV 18-

PACKAGE INCLUDED

1- CN-02 M8	12
2- D8 WASHER	12
3- M8 HEX NUT	12
4- CLAMPING PIECE	12
5- M8 SPECIAL BOLT	12
6- M6x15 LOCK HEADED BOLT	12
7- M6 HEX FLANGE NUT	12

USE OF CN-... PARTS

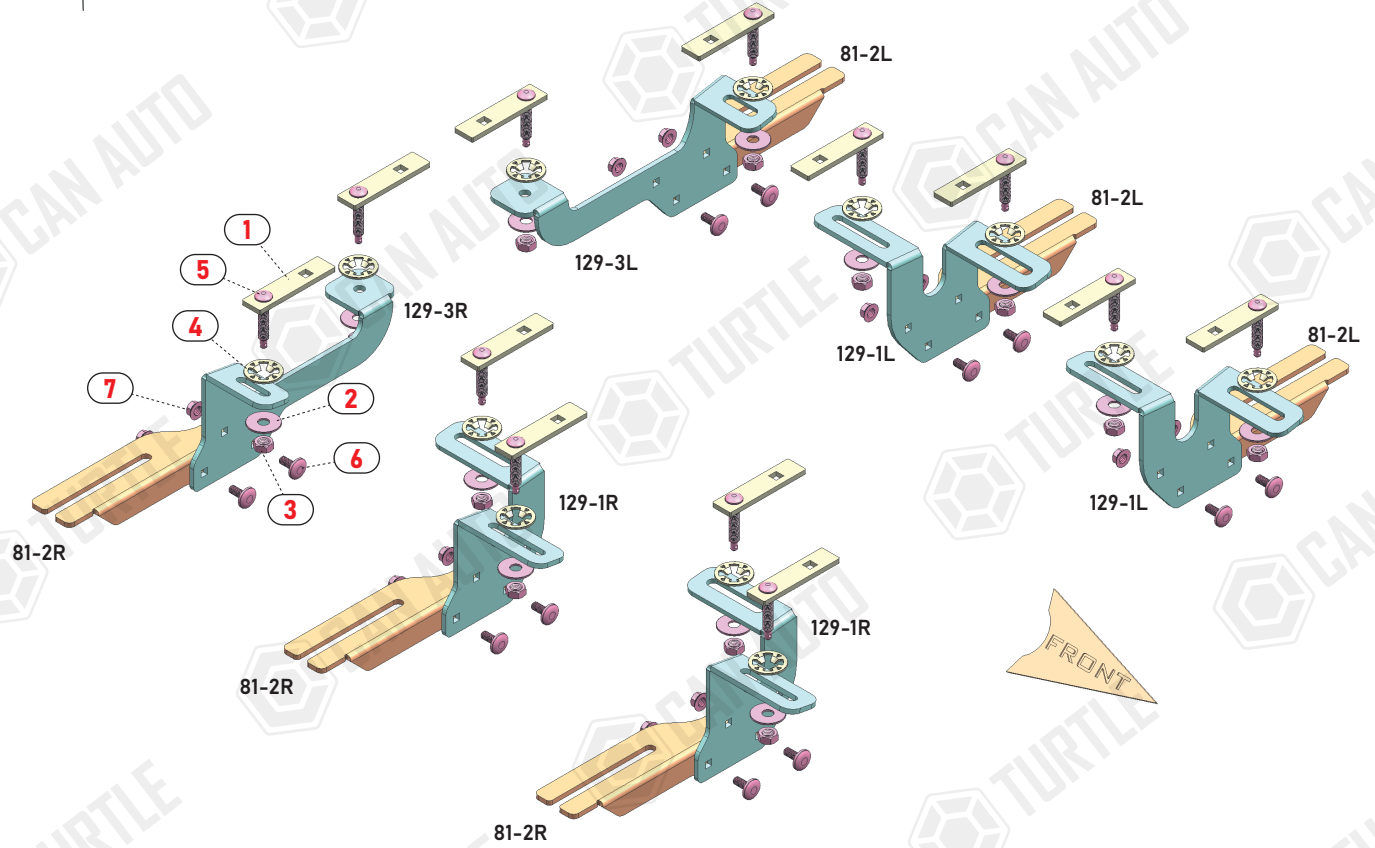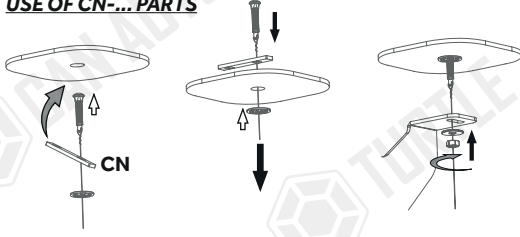


Whatever product type you will use, Example of side step types:

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

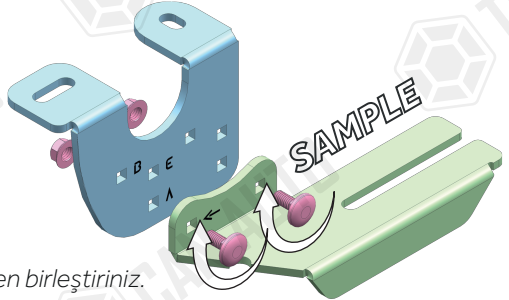

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

