

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

- \* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- \* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- \* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

**ASSEMBLY INSTRUCTIONS (BRACKET KIT)**

Product Code: MB05085 (A/B-TYPE)


**COMPATIBLE VEHICLES**

- FI FLLBCK DOUBLE CAB 16-
- MIT L200 (Mk4) DOUBLE CAB 06-14
- MIT L200 (Mk5) DOUBLE CAB 15-
- MIT TRTN (Mk4) DOUBLE CAB 06-14
- MIT TRTN (Mk5) DOUBLE CAB 15-
- RAM 1200 DOUBLE CAB 16-

**PACKAGE INCLUDED**

- |                           |    |
|---------------------------|----|
| 1- M8x25 HEX BOLT         | 12 |
| 2- D8 WASHER              | 12 |
| 3- M6x15 LOCK HEADED BOLT | 12 |
| 4- M6 HEX FLANGE NUT      | 12 |

ZIPLOCK BAG

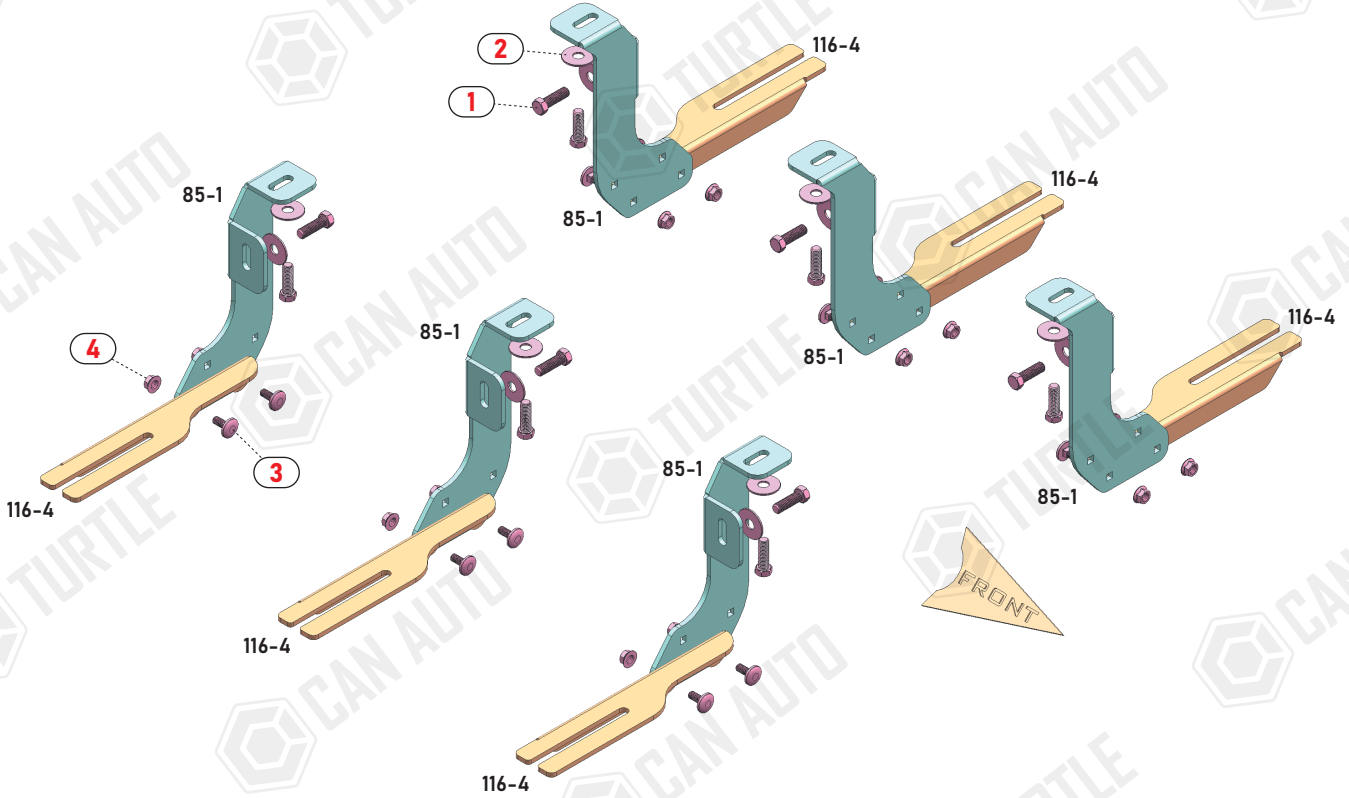


Whatever product type you will use, Example of side step types;

*Type A (Alyans, Sapphire, Emerald)*

*Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)*

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

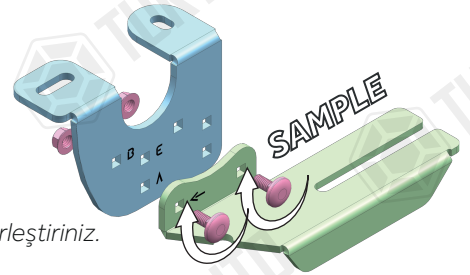

MB05085 / Rev.02 / 07.10.2021 (TPRK)