



ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB05131 (A/B-TYPE)



COMPATIBLE VEHICLES
VOL XC60 SUV 09-17

PACKAGE INCLUDED

1 - CN-01 M8	10
2 - D8 WASHER	10
3 - M8 HEX NUT	10
4 - CLAMPING PIECE	10
5 - M8 SPECIAL BOLT	10
6 - M6x15 LOCK HEADED BOLT	10
7 - M6 HEX FLANGE NUT	10

ZIPLOCK BAG

USE OF CN-... PARTS

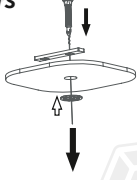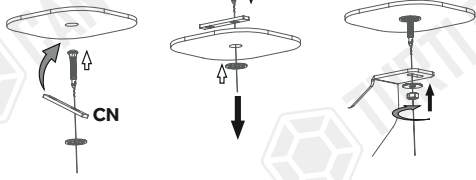

CN

131-1L

81-8L

131-1R

131-4L

5

1

4

2

3

131-3L

131-2L

7

131-4R

6


81-8R

131-2R

131-3R



Whatever product type you will use, Example of side step types;
Type A (*Alyans, Sapphire, Emerald*)
Type B (*Brillant, Another, Pearl, Ring, Plus*) / Type E (*Era*)
Assemble the parts through the matching fixing holes.

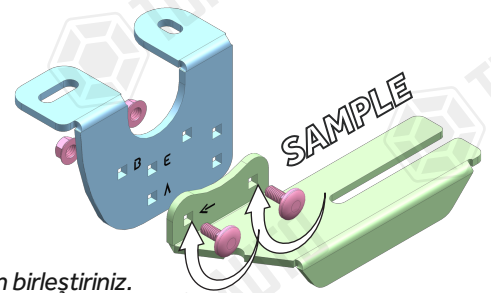

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.



REAR



FRONT

MB05131 / Rev.01 / 25.01.2022 (KRST)