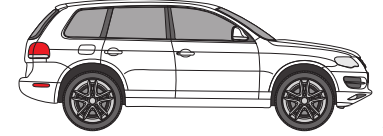
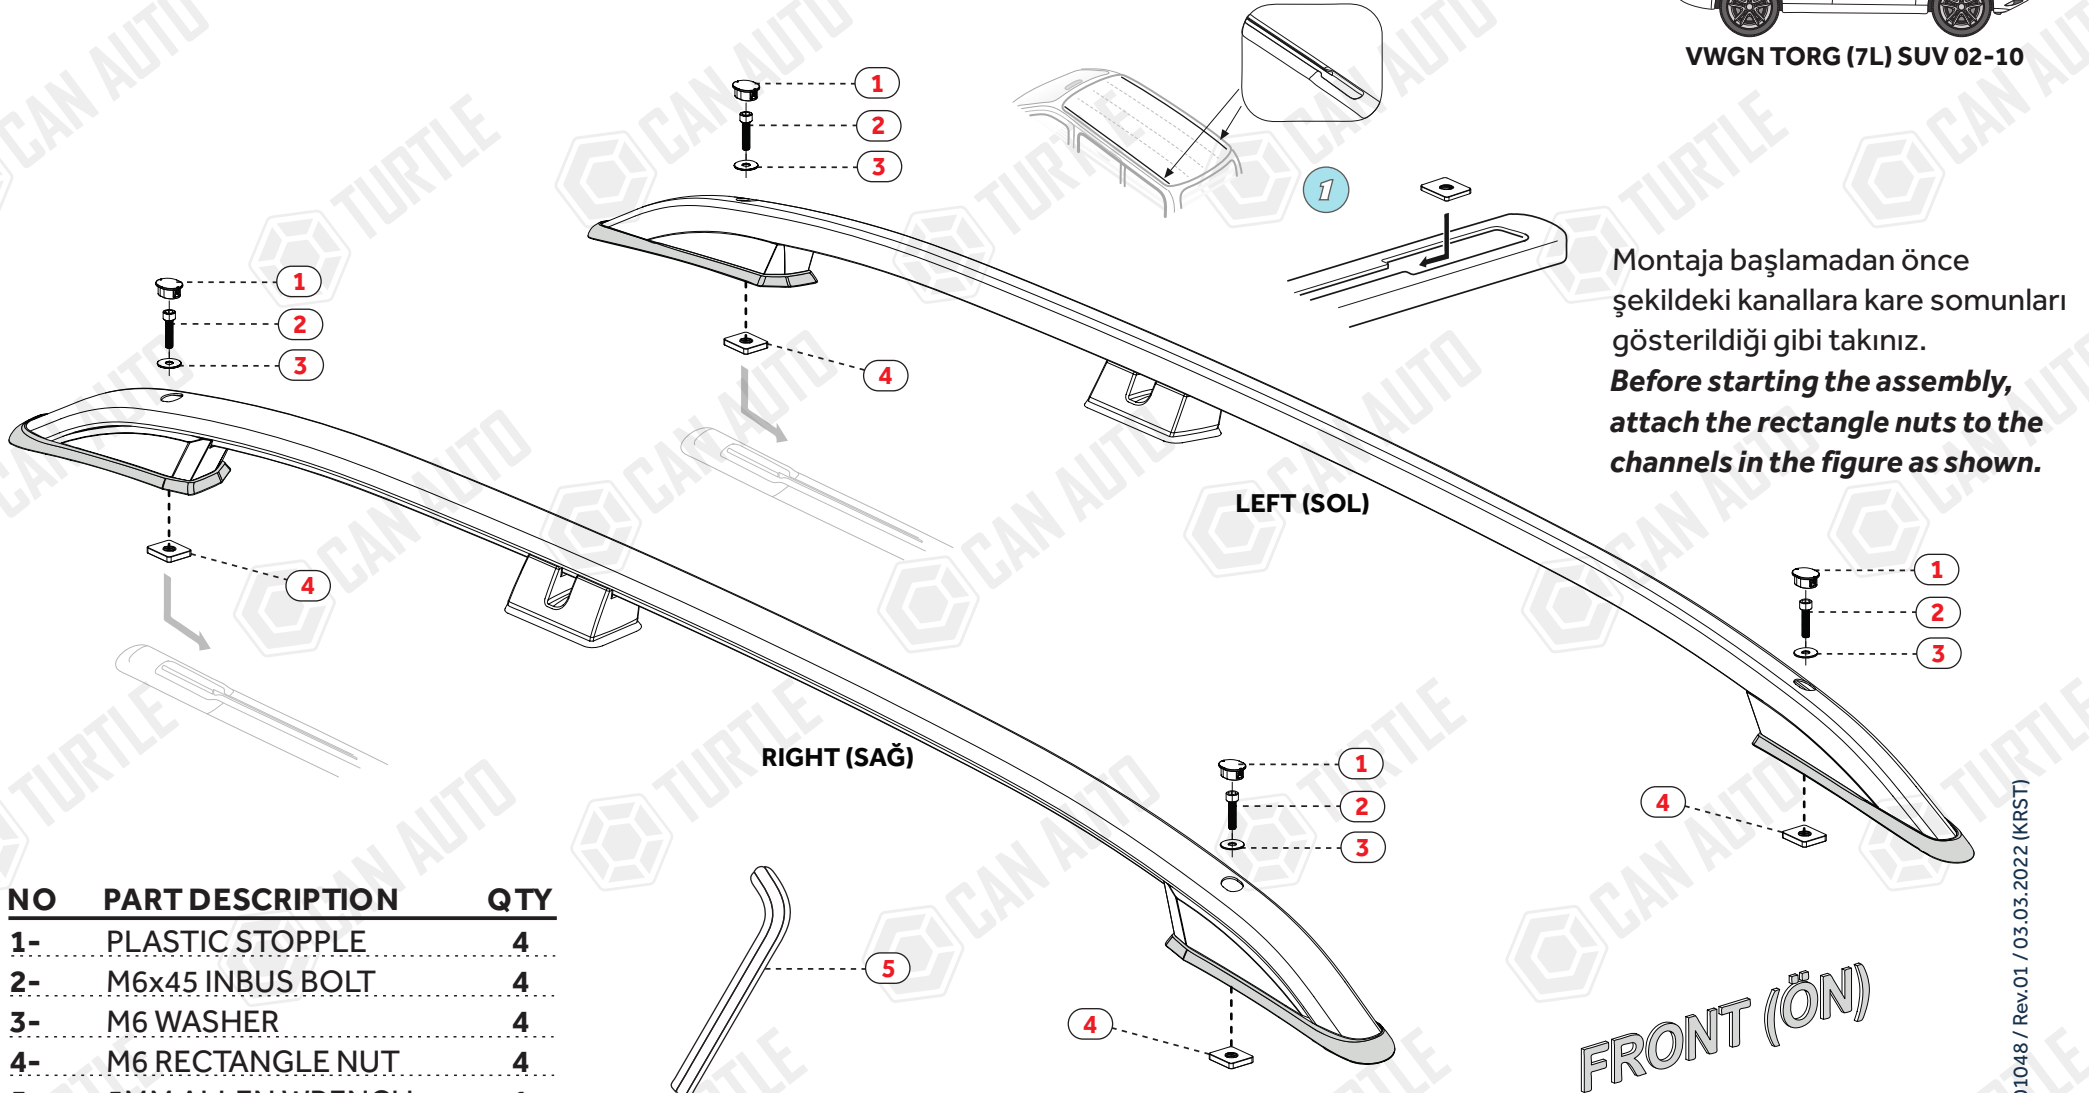


**CAN AUTO****TURTLE****ASSEMBLY INSTRUCTIONS (ROOF RAIL)**

Product Code: MR01048 (Crown)

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

**VWGN TORG (7L) SUV 02-10**

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	4
2-	M6x45 INBUS BOLT	4
3-	M6 WASHER	4
4-	M6 RECTANGLE NUT	4
5-	5MM ALLEN WRENCH	1