



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION




ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01053 (A-TYPE)
MB02053 (B-TYPE)

COMPATIBLE VEHICLES

HYN GSNTFE (DM) SUV 13-18

USE OF CN-... PARTS

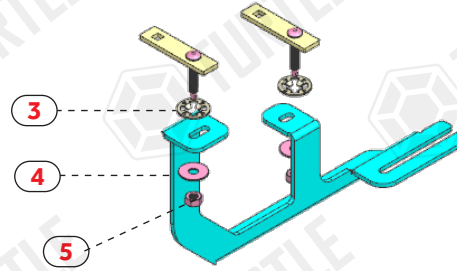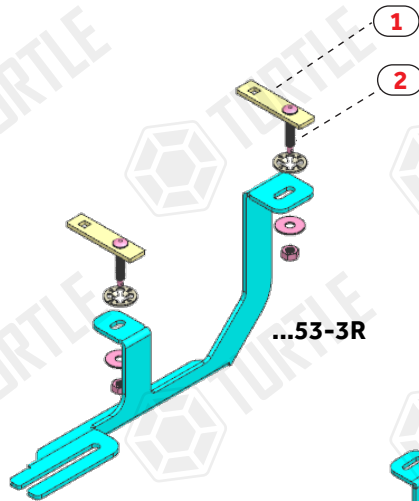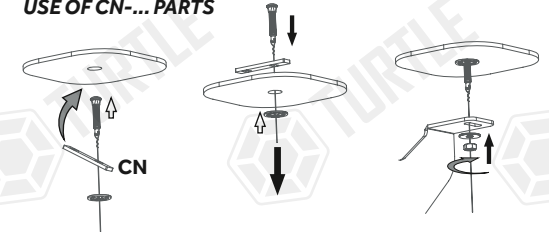

...53-3L

...52-4R

7

6

...53-1L

...53-2R

...53-1R



PACKAGE INCLUDED

1- CN-02	4
2- M8 SPECIAL BOLT	4
3- CLAMPING PIECE	4
4- D8 WASHER	4
5- M8 HEX NUT	4
6- M6x20 HEX BOLT	8
7- D6 WASHER	8

ZIPLOCK BAG