





ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB05130 (A/B-TYPE)
R-LINE: MB05135 (A/B-TYPE)

COMPATIBLE VEHICLES
PRSC CYNN (9PA-E1) SUV 02-10
PRSC CYNN (92A-E2) SUV 11-18
VWGN TORG (7L) SUV 02-10
VWGN TORG (7P) SUV 11-18

PACKAGE INCLUDED	
1- CN-02 M8	10
2- CN-05 M8	2
3- M8 SPECIAL BOLT	12
4- CLAMPING PIECE	12
5- D8 WASHER	12
6- M8 HEX NUT	12
7- M6x15 LOCK HEADED BOLT	12
8- M6 HEX FLANGE NUT	12

ZIPLOCK BAG


USE OF CN-... PARTS

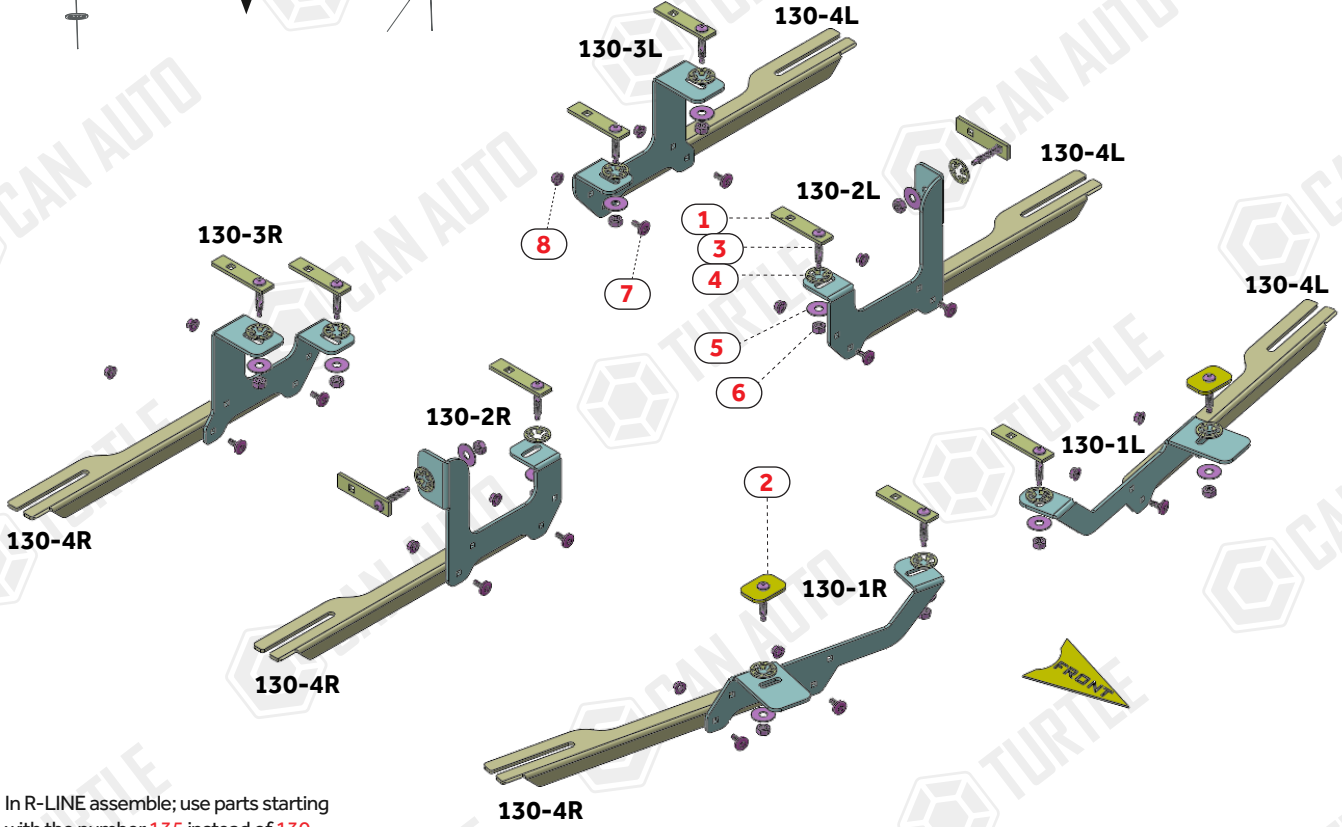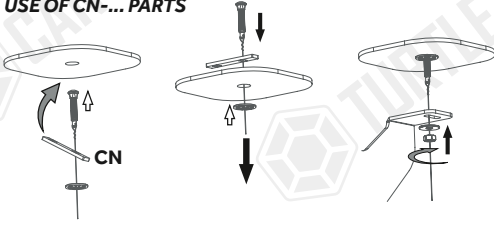



In R-LINE assemble; use parts starting with the number **135** instead of **130**

R-LINE montajında; **130** yerine **135** numarası ile başlayan parçaları kullanınız

Whatever product type you will use, Example of side step types;
Type A (Alyans, Sapphire, Emerald)
Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)
Assemble the parts through the matching fixing holes.

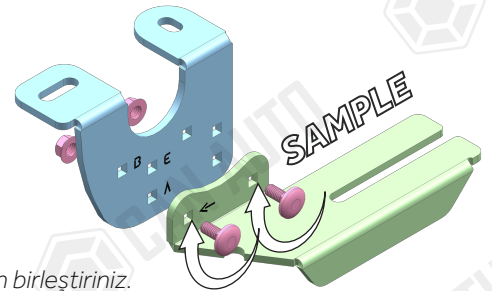

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

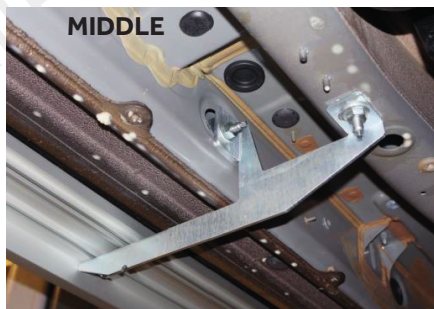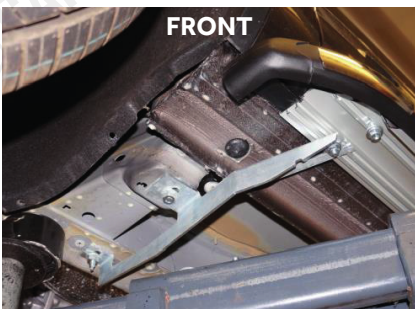

MB05130 / Rev01 / 17.01.2022 (KRST)