



**ASSEMBLY INSTRUCTIONS (BRACKET KIT)**  
Product Code: MB05145 (A/B-TYPE)



**COMPATIBLE VEHICLES**  
CTRN C3 AIRCRSS SUV 18+  
PEU 2008 SUV 20-

**PACKAGE INCLUDED**


1- CN-03 M8	2
2- M8x25 HEX BOLT	4
3- D8 WASHER	6
4- M8 HEX NUT	6
5- CLAMPING PIECE	2
6- M8 SPECIAL BOLT	2
7- M6x15 LOCK HEADED BOLT	8
8- M6 HEX FLANGE NUT	8

ZIPLOCK BAG


**USE OF CN-... PARTS**

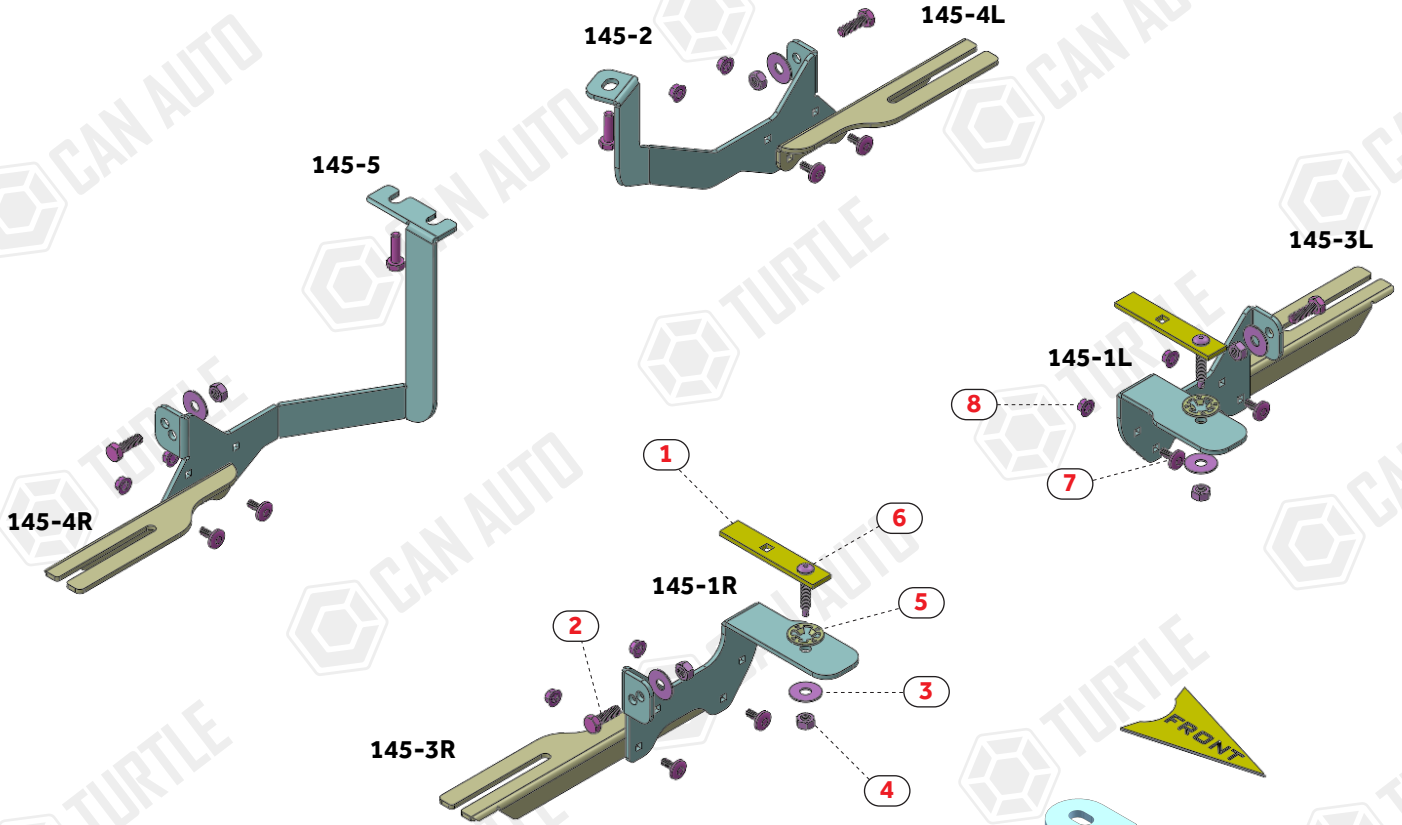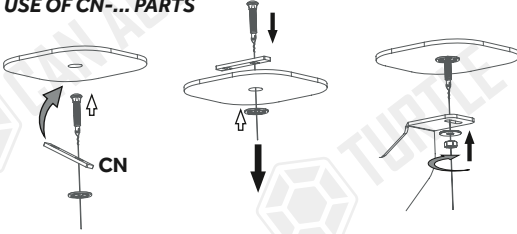

Whatever product type you will use, Example of side step types;  
Type A (Alyans, Sapphire, Emerald)  
Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)  
Assemble the parts through the matching fixing holes.

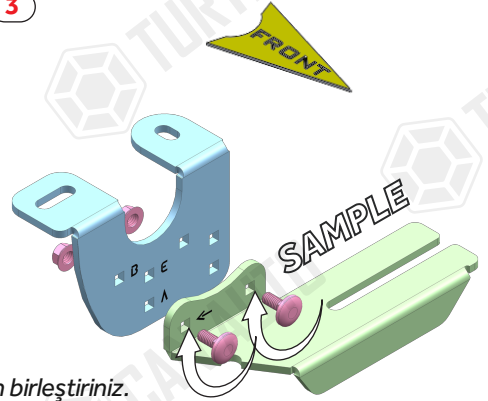

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

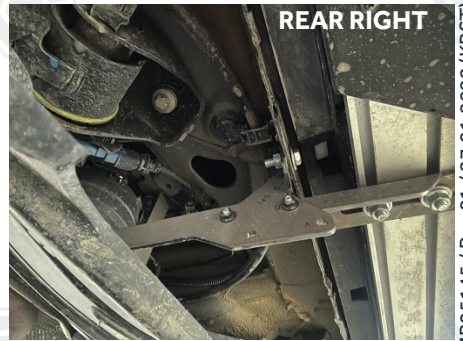

MB05145 / Rev.01 / 27.01.2022 (KRST)