

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05122 (A/B-TYPE)

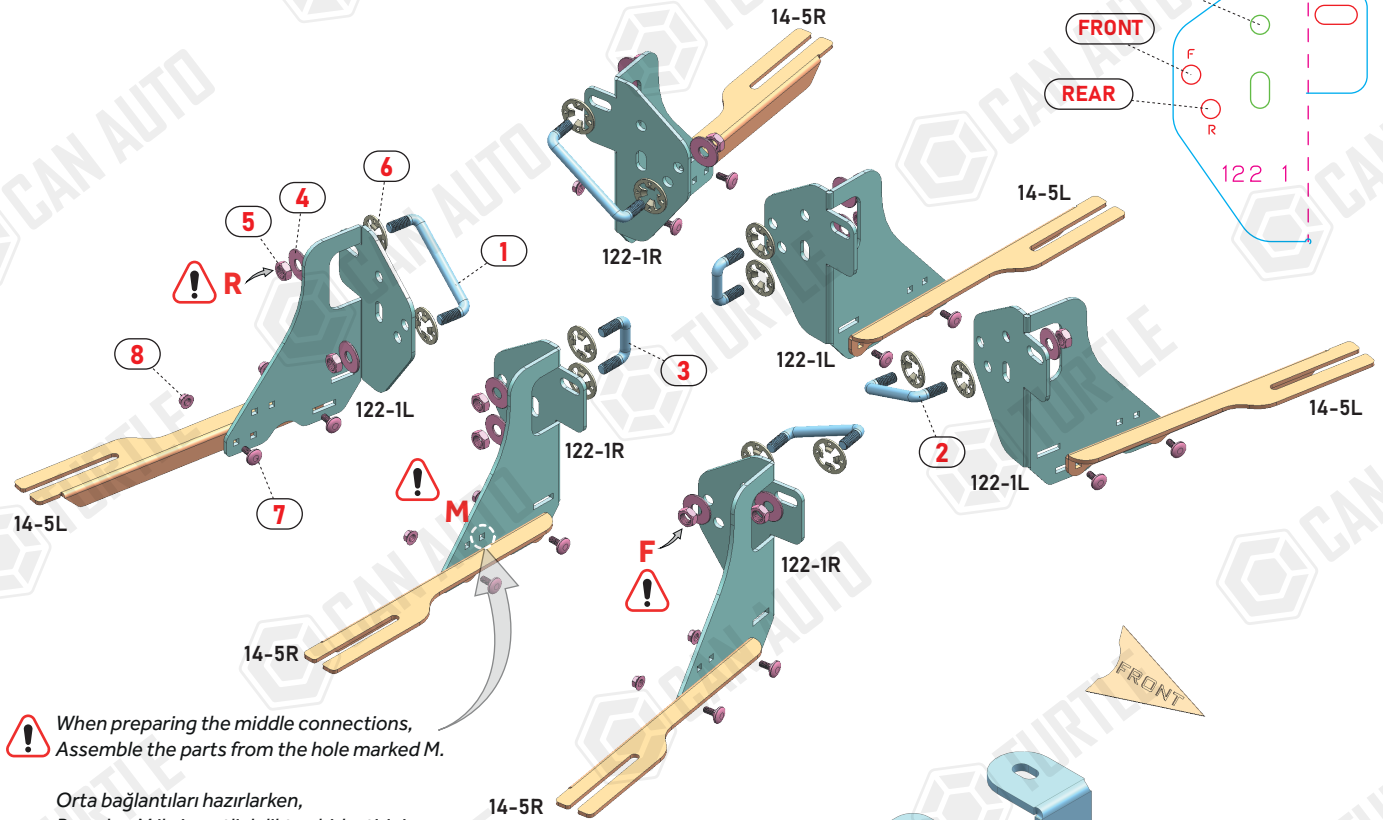
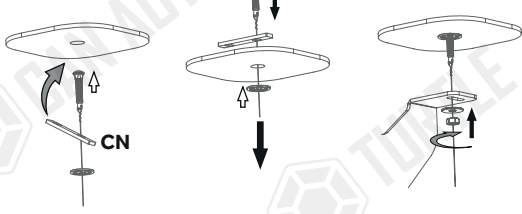
COMPATIBLE VEHICLES

VWGN AMRK DOUBLE CAB 10-

PACKAGE INCLUDED

1-	M10 U-BOLT 95 MM	2
2-	M10 U-BOLT 85 MM	2
3-	M10 U-BOLT 40 MM	2
4-	D10 WASHER	12
5-	M10 HEX NUT	12
6-	D10 CLAMPING PIECE	12
7-	M6x15 LOCK HEADED BOLT	12
8-	M6 HEX FLANGE NUT	12

ZIPLOCK BAG

USE OF CN-... PARTS

When preparing the middle connections,
Assemble the parts from the hole marked M.

Orta bağlantıları hazırlarken,
Parçaları M ile işaretli delikten birleştiriniz.

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

