



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION




ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05101 (A/B-TYPE)

COMPATIBLE VEHICLES

REN KOLS 07-16

USE OF CN-... PARTS

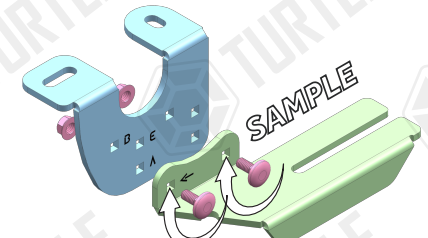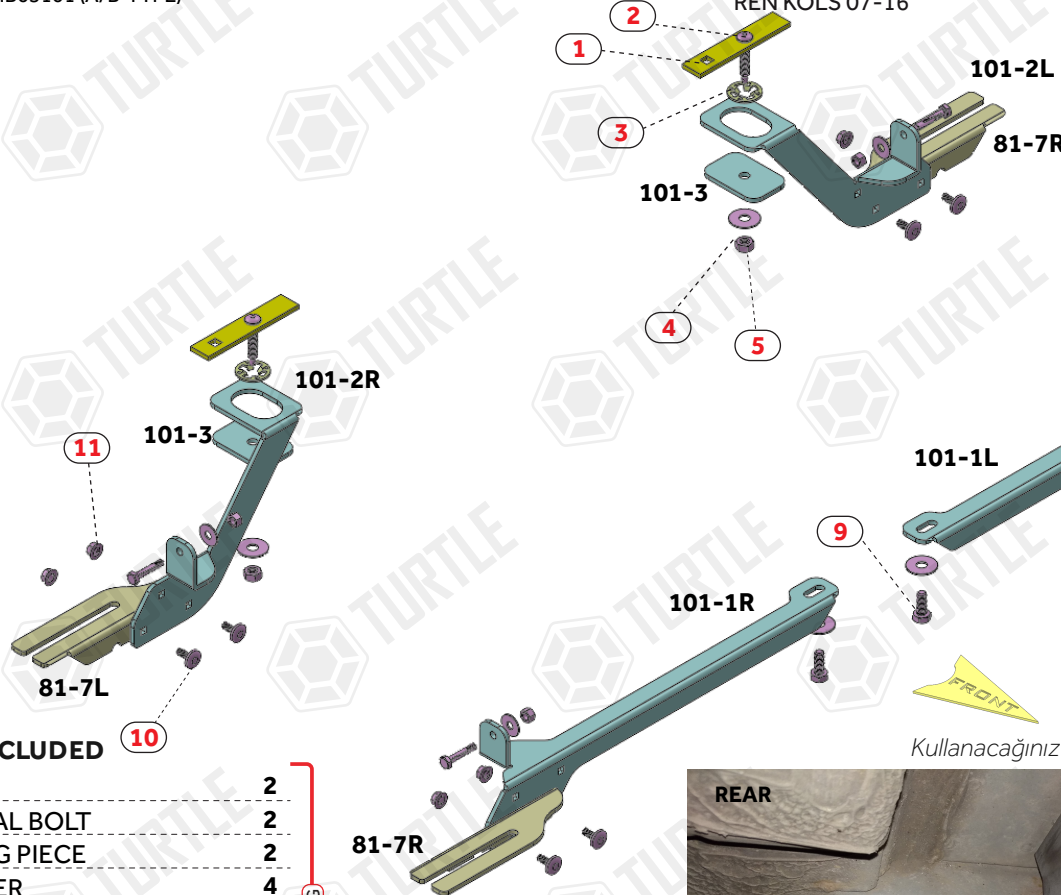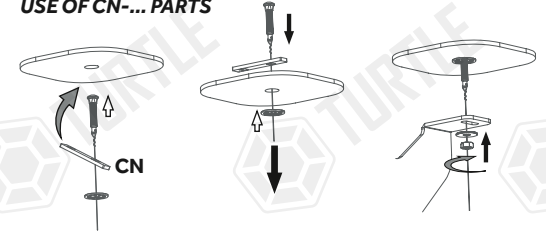

Whatever product type you will use, Example of side step types:
 Type A (Alyans, Sapphire, Emerald)
 Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)
 Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

PACKAGE INCLUDED

1- CN-03	2
2- M8 SPECIAL BOLT	2
3- CLAMPING PIECE	2
4- D8 WASHER	4
5- M8 HEX NUT	2
6- M6x30 HEX BOLT	4
7- D6 WASHER	4
8- M6 HEX FLANGE NUT	4
9- M8x25 HEX BOLT	2
10- M6x15 LOCK HEADED BOLT	8
11- M6 HEX FLANGE NUT	8

ZIPLOCK BAG



MB05101 / Rev.02 / 18.05.2023 (ECE)