



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01028 (A-TYPE)
Product Code: MB02028 (B-TYPE)






COMPATIBLE VEHICLES

FI FRMNT 11-
DOD JRNY 09-

PACKAGE INCLUDED

1- CN-01 M8	4
2- M8 SPECIAL BOLT	4
3- CLAMPING PIECE	4
4- D8 WASHER	12
5- M8 HEX NUT	16
6- M8x20 LOCK HEADED BOLT	4
7- M8x30 LOCK HEADED BOLT	8
8- BRACKET FASTENER	8

USE OF CN-... PARTS

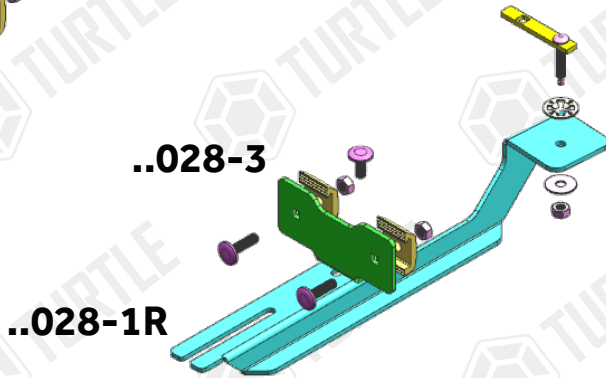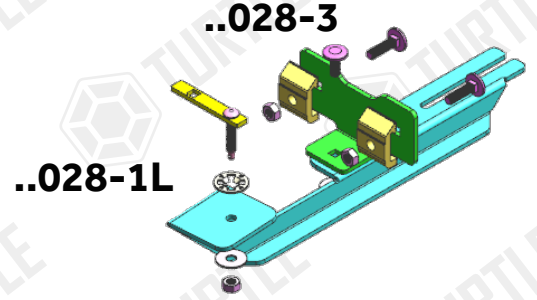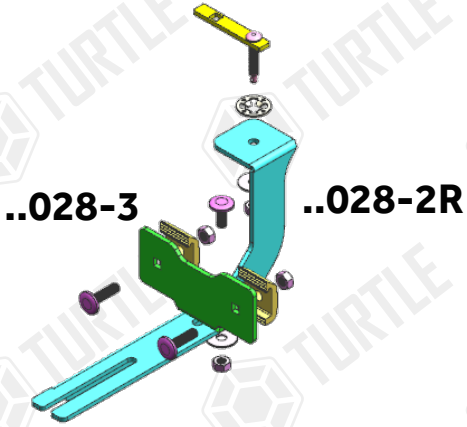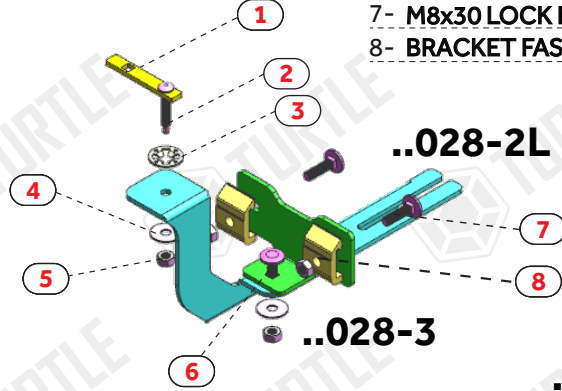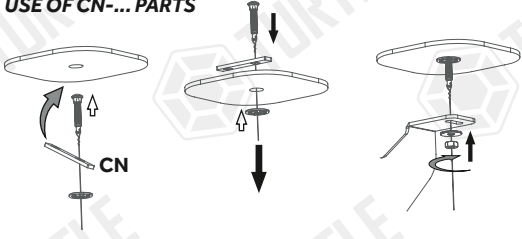


Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / **Type E** (Era)

Assemble the parts through the matching fixing holes.

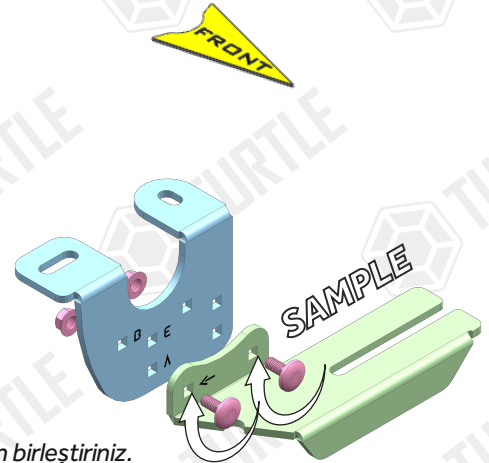

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

