



FIRST TIME INSTALLATION

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01089 (A-TYPE)
MB02089 (B-TYPE)

COMPATIBLE VEHICLES



NSS PFNDR (R52) SUV 13-20

PACKAGE INCLUDED

1- CN-01	10
2- M8 SPECIAL BOLT	10
3- CLAMPING PIECE	10
4- D8 WASHER	10
5- M8 HEX NUT	10
6- M8x20 SQUARE NECK BOLT	1
7- M8 HEX FLANGE NUT	1
8- M6x20 HEX BOLT	3
9- D6 WASHER	3

ZIPLOCK BAG

USE OF CN-... PARTS

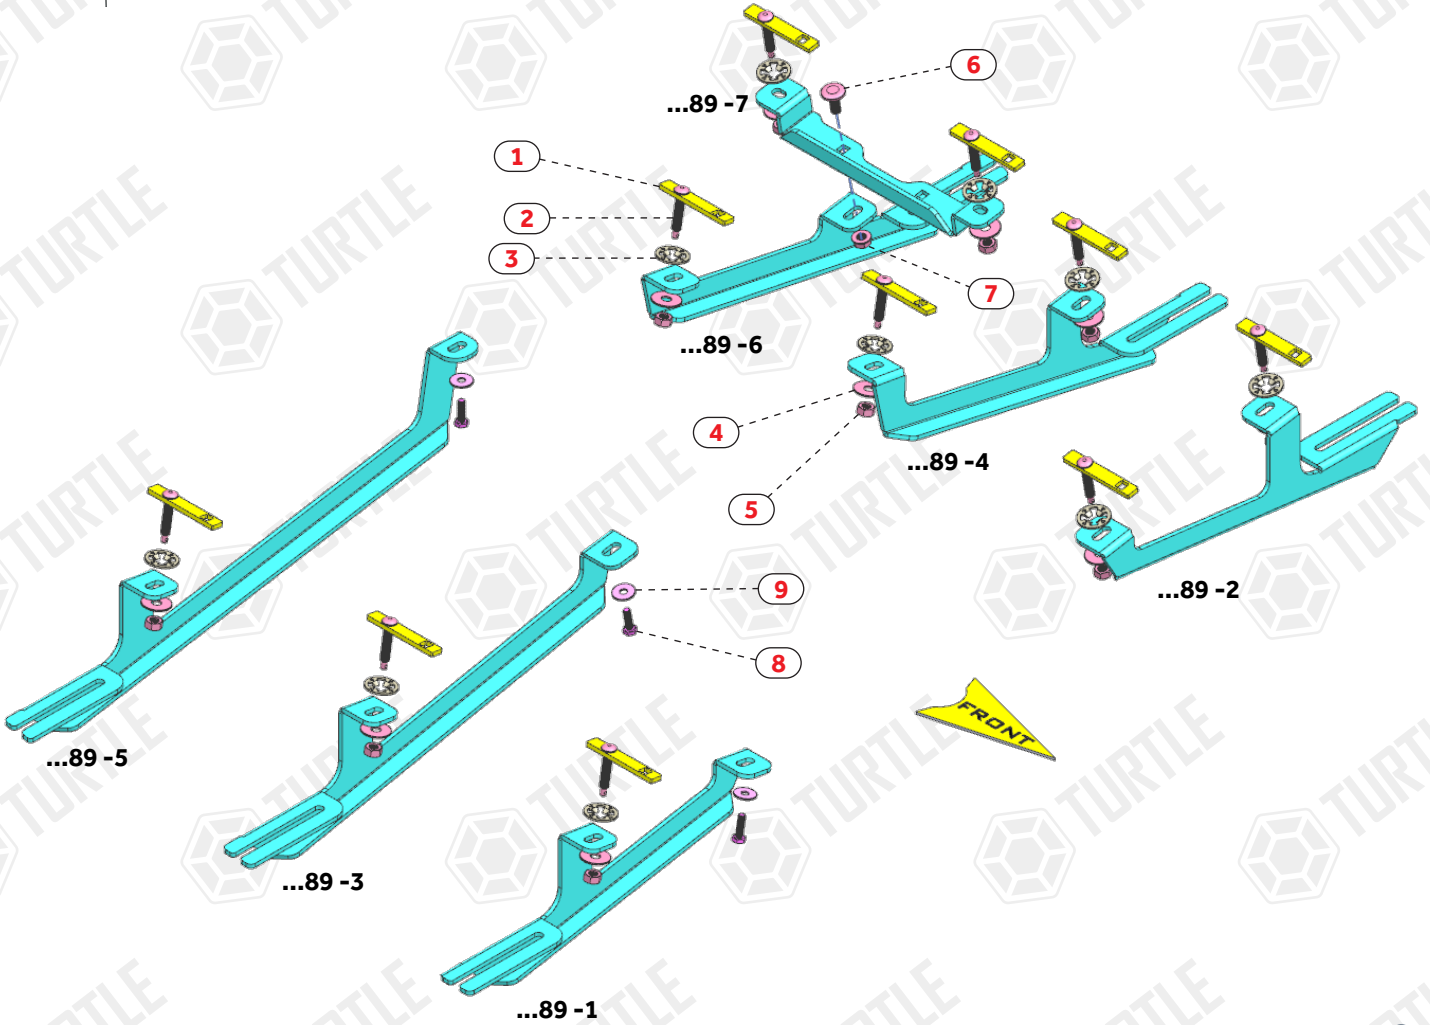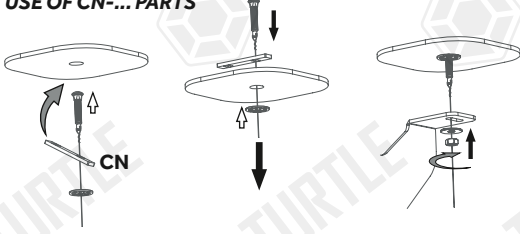

MB01089-MB02089 / Rev.00 / 11.01.2022 (KRST)