



ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB02100 (B-TYPE)
Product Code: MB03100 (E-TYPE)



COMPATIBLE VEHICLES
MBNZ CTN VAN 12-19

PACKAGE INCLUDED


1- CN-07 M8	6
2- M8 SPECIAL BOLT	6
3- CLAMPING PIECE	6
4- D8 WASHER	6
5- N8 HEX NUT	6

ZIPLOCK BAG

USE OF CN-... PARTS

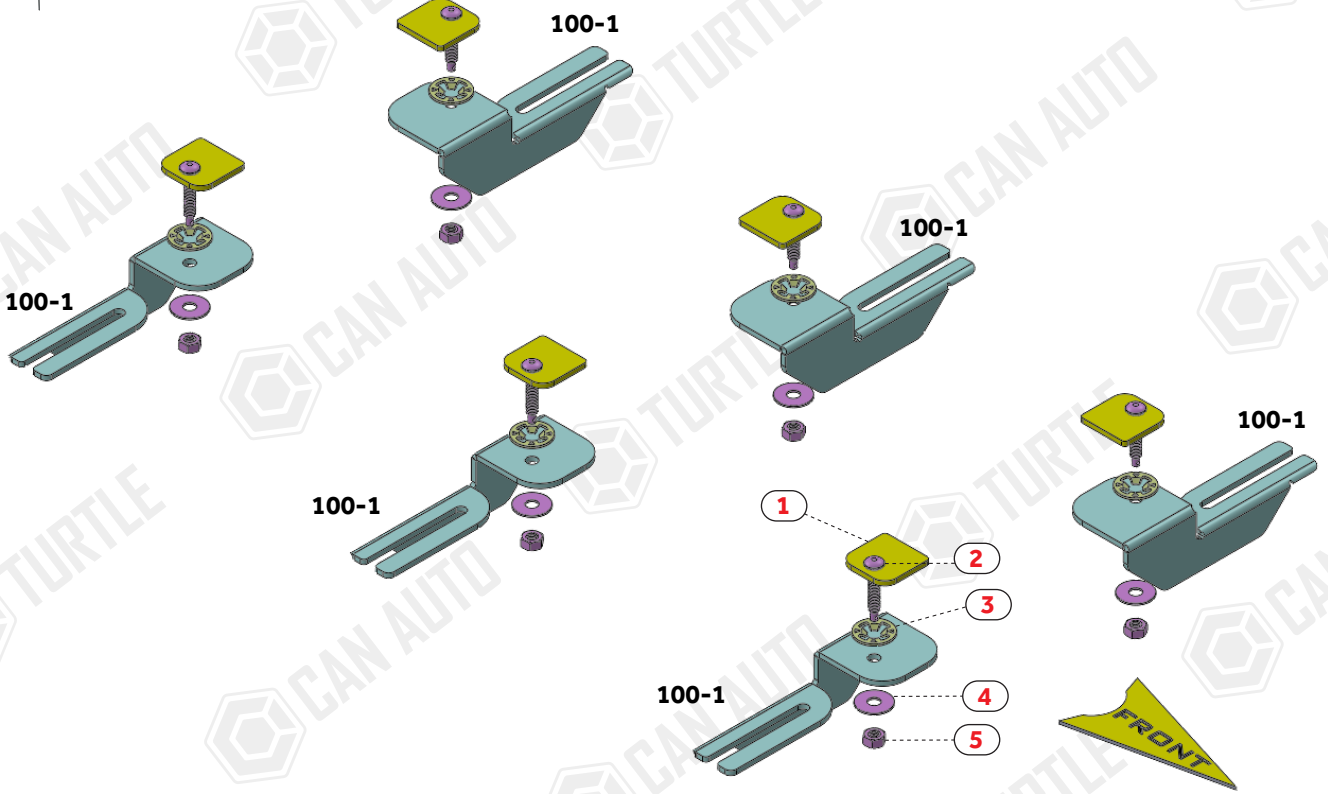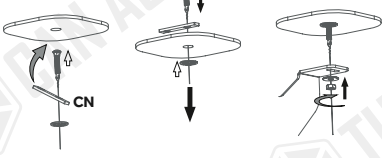

Whatever product type you will use, Example of side step types;
Type A (Alyans, Sapphire, Emerald)
Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)
Assemble the parts through the matching fixing holes.

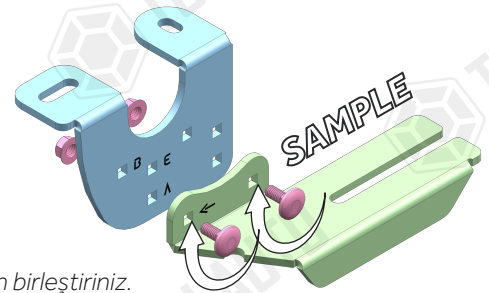

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

