



- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05055 (A/B-TYPE)



COMPATIBLE VEHICLES

HYH TCSN (TL) SUV 16-20
KI SPRTG (QL) SUV 16-20

PACKAGE INCLUDED

1- CN-02 M8	4
2- CN-03 M8	4
3- M8 SPECIAL BOLT	8
4- CLAMPING PIECE	8
5- M8 WASHER	8
6- M8 HEX NUT	8
7- M6x15 LOCK HEADED BOLT	12
8- M6 HEX FLANGE NUT	12

USE OF CN-... PARTS

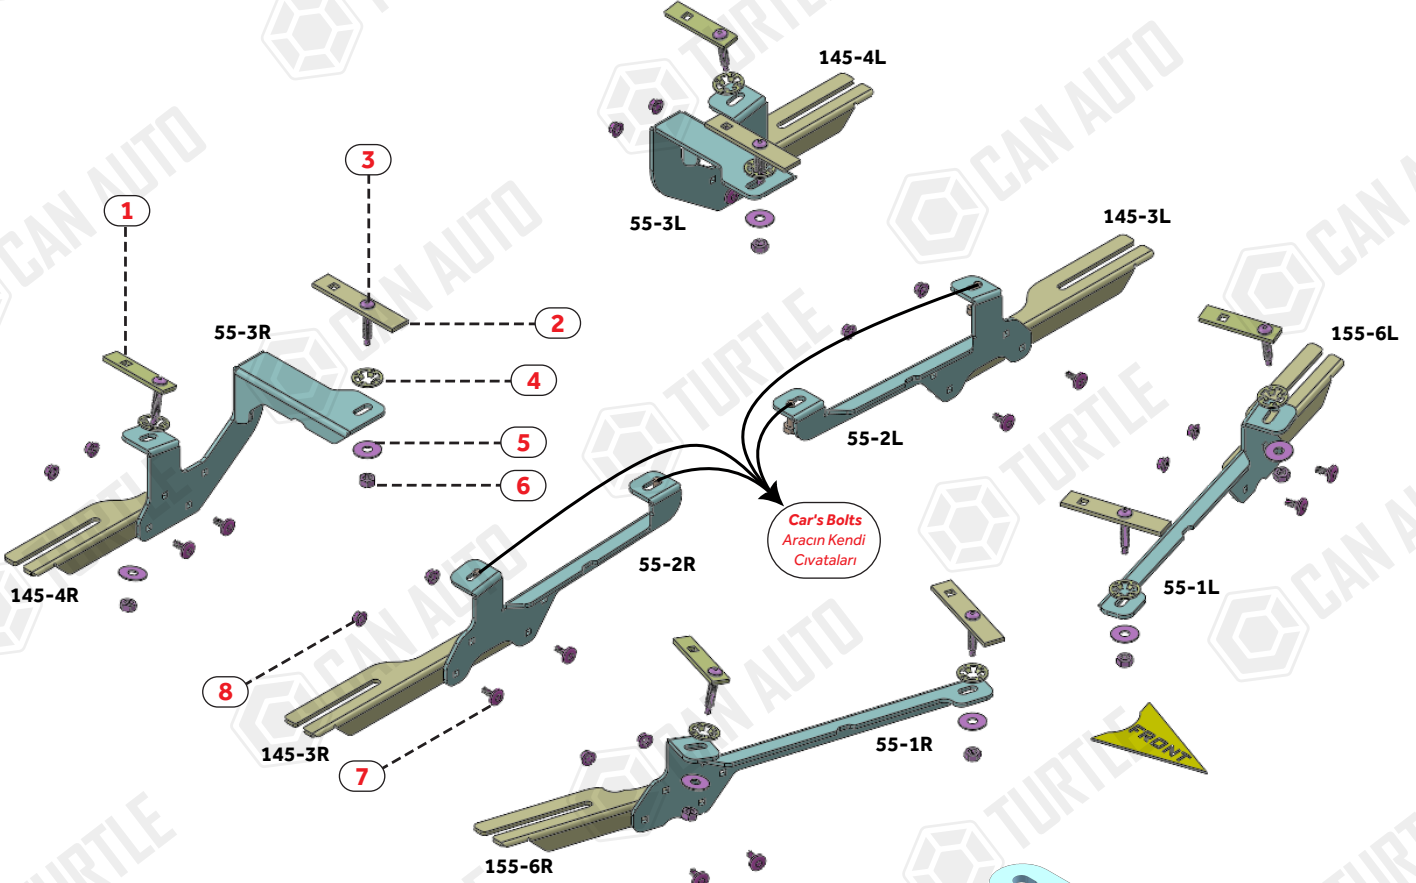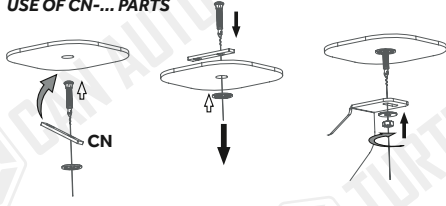


Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / **Type E** (Era)

Assemble the parts through the matching fixing holes.

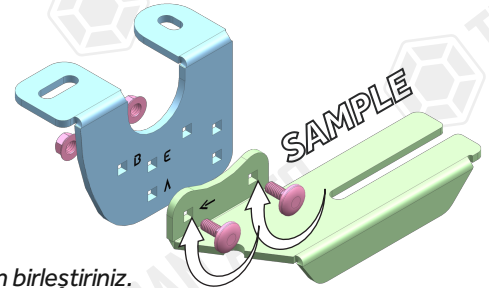

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.



* Görsellerde kullanılan bağlantı ayakları ile kutu içerisinden çıkan bağlantı ayakları farklılık gösterebilir. Görseller bağlantı yapılacak yerleri belirtmek içindir.

* The brackets used in the images and the brackets that come out of the box may differ. Images are to indicate where to connect.