



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05139 (A/B TYPE)

COMPATIBLE VEHICLES

ISZ DMX (RT50) DOUBLE CAB 12-15
ISZ DMX (RT85) DOUBLE CAB 16-19

USE OF CN-... PARTS

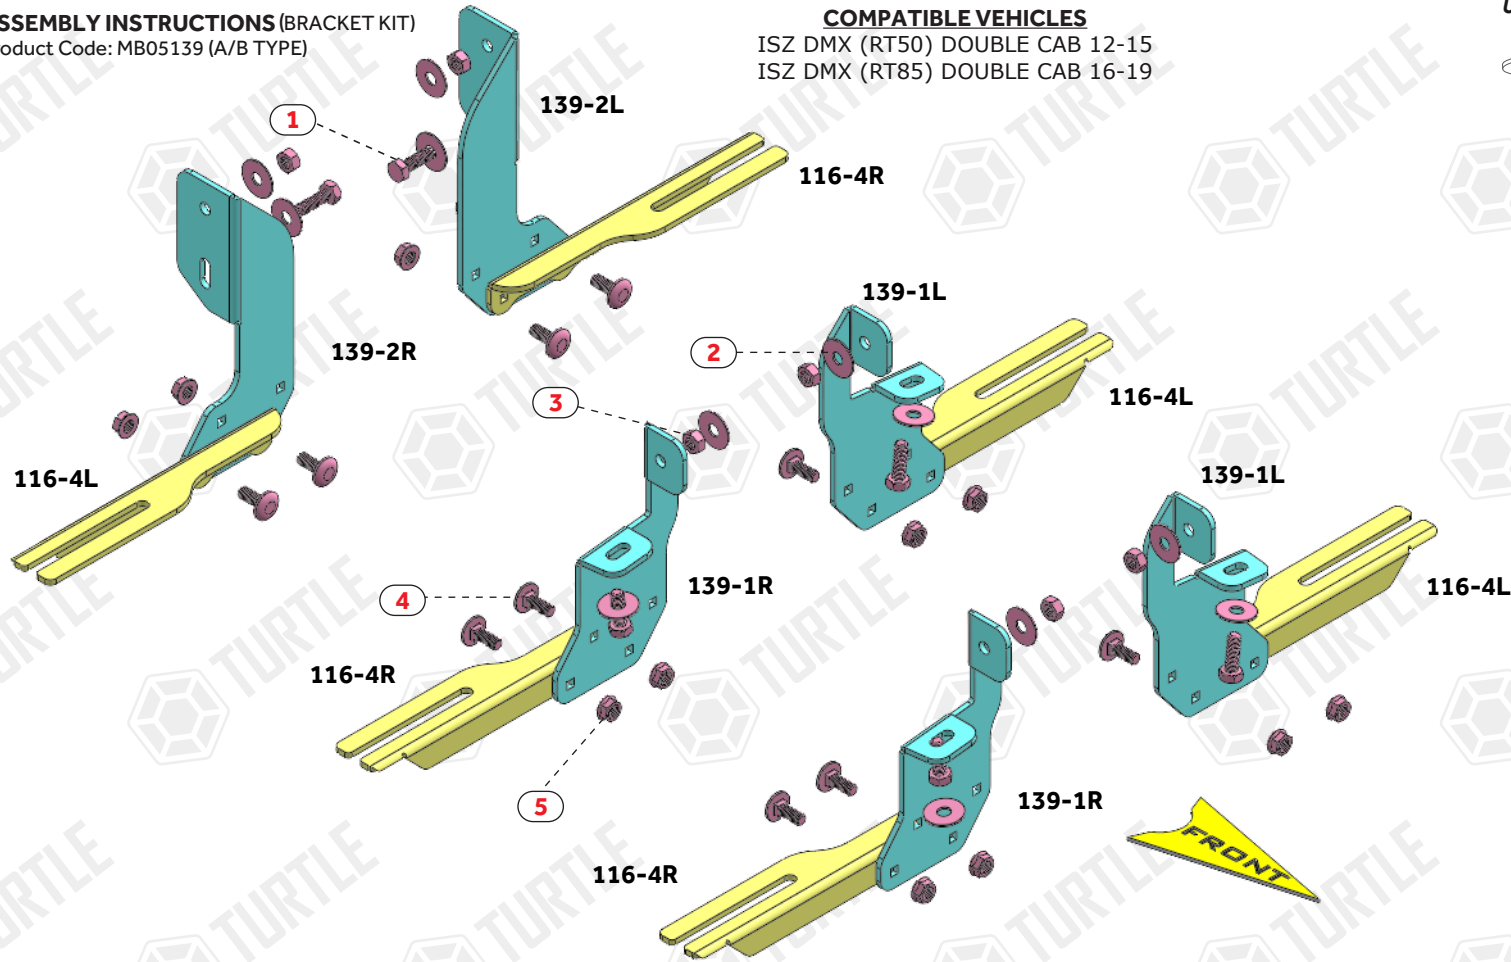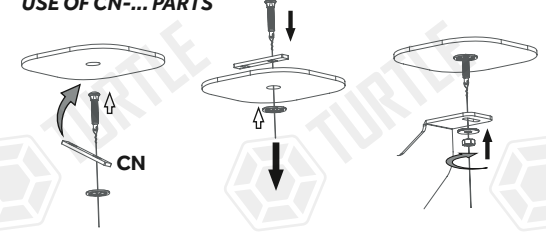

PACKAGE INCLUDED

1- M8x25 HEX BOLT	6
2- D8 WASHER	12
3- M8 HEX NUT	6
4- M6x15 LOCK HEADED BOLT	12
5- M6 HEX FLANGE NUT	12

ZIP LOCK BAG


Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

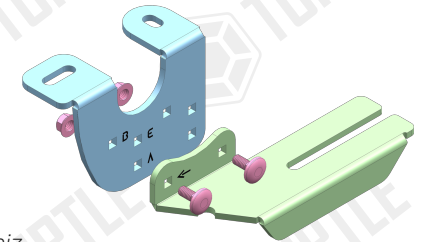

MB05139 / Rev.02 / 27.03.2023 (ECE)