

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

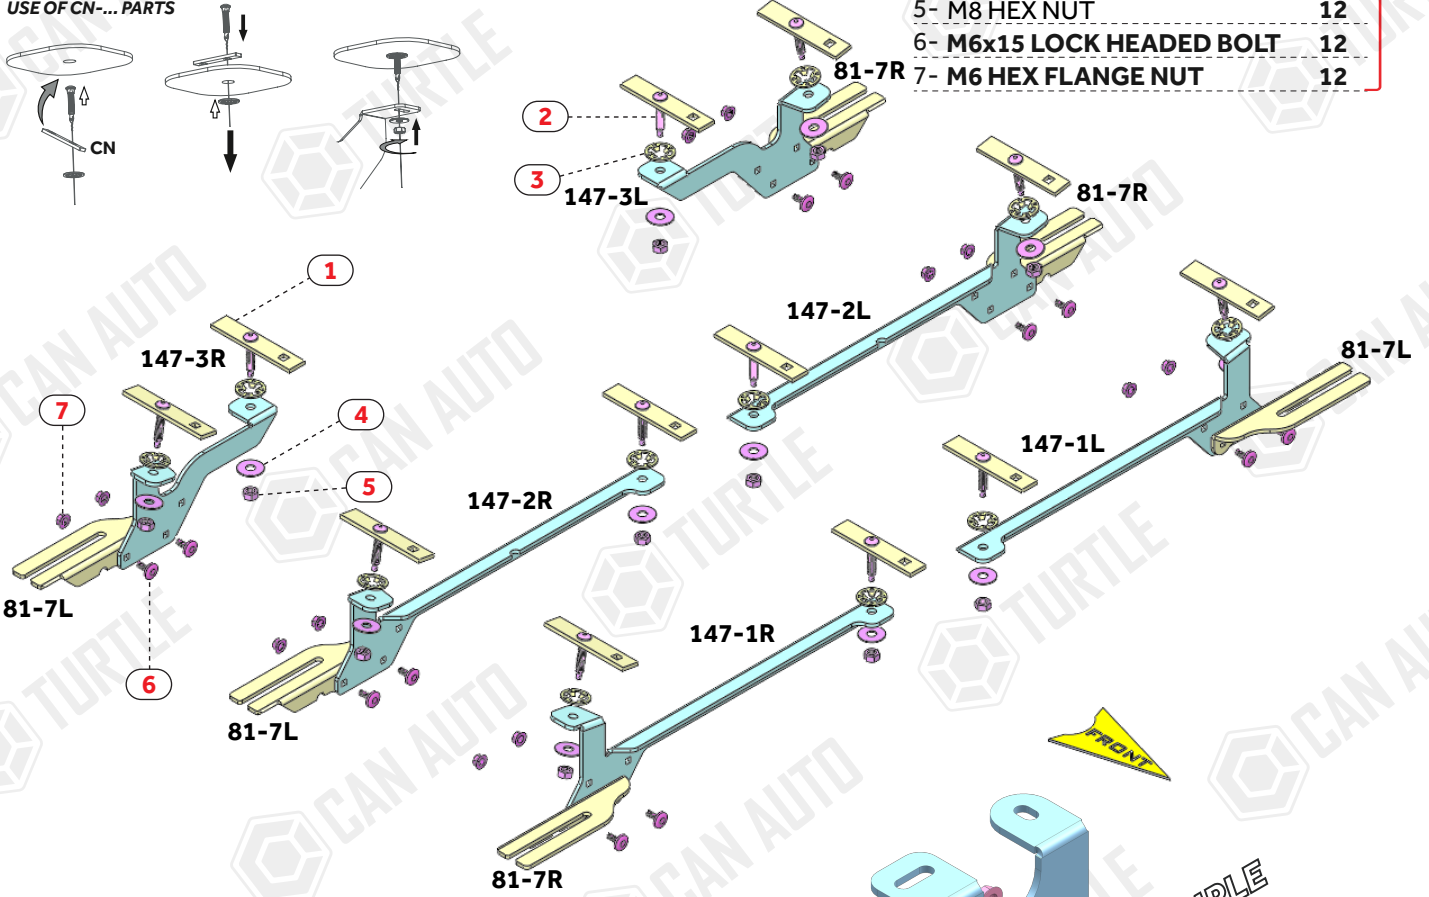
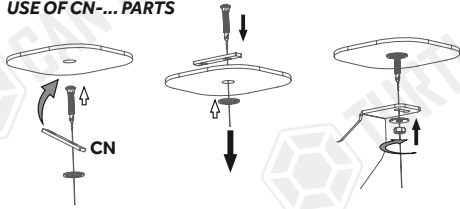
* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB05147 (A/B-TYPE)**COMPATIBLE VEHICLES**
HYN KON SUV 17-**PACKAGE INCLUDED**

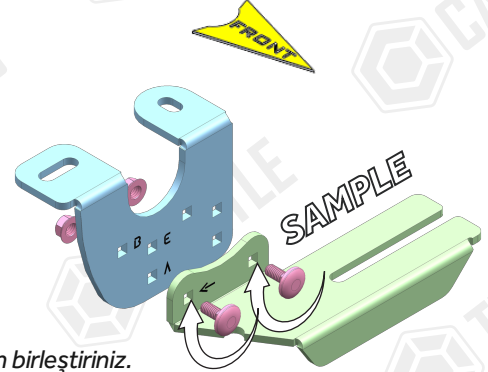
1- CN-03 M8	12
2- M8 SPECIAL BOLT	12
3- CLAMPING PIECE	12
4- D8 WASHER	12
5- M8 HEX NUT	12
6- M6x15 LOCK HEADED BOLT	12
7- M6 HEX FLANGE NUT	12

USE OF CN-... PARTS

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)**Type B** (Brillant, Another, Pearl, Ring, Plus) / **Type E** (Era)

Assemble the parts through the matching fixing holes.



Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****MIDDLE****FRONT**