

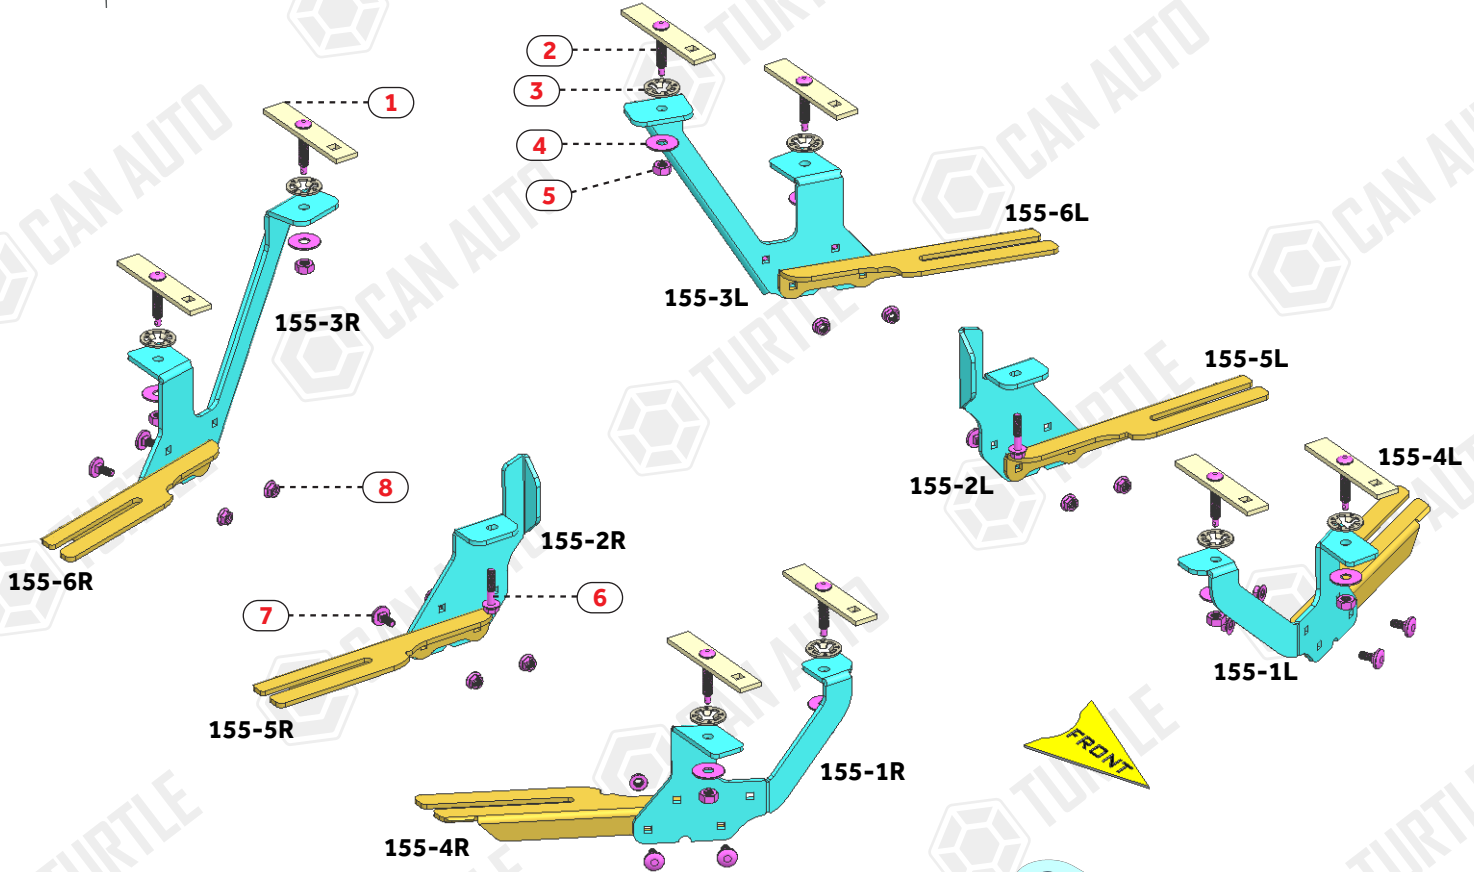
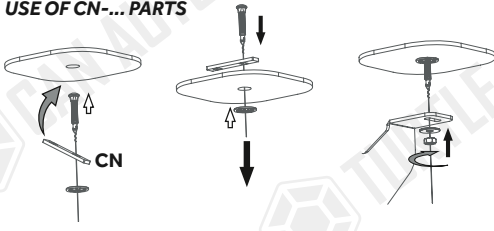
**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB05155 (A/B-TYPE)**COMPATIBLE VEHICLES**
HYN TCSN (NX4) 22-**PACKAGE INCLUDED**

1- CN-03 M8	8
2- M8 SPECIAL BOLT	8
3- CLAMPING PIECE	8
4- D8 WASHER	8
5- M8 HEX NUT	8
6- M6x30 FLANGE HEX BOLT	2
7- M6x15 LOCK HEADED BOLT	12
8- M6 HEX FLANGE NUT	12

ZIPLOCK BAG

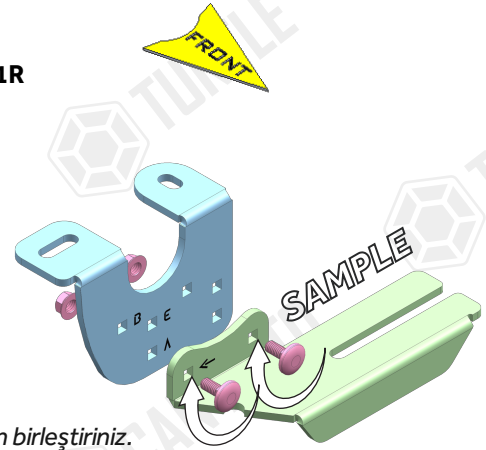
USE OF CN-... PARTS

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / **Type E** (Era)

Assemble the parts through the matching fixing holes.



Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****MIDDLE****FRONT**

MB05155 / Rev.01 / 20.10.2022 (KRST)