



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION





ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01160 (A TYPE)
MB02160 (B TYPE)


COMPATIBLE VEHICLES

HND HRV (Mk3) SUV 21-


USE OF CN-... PARTS

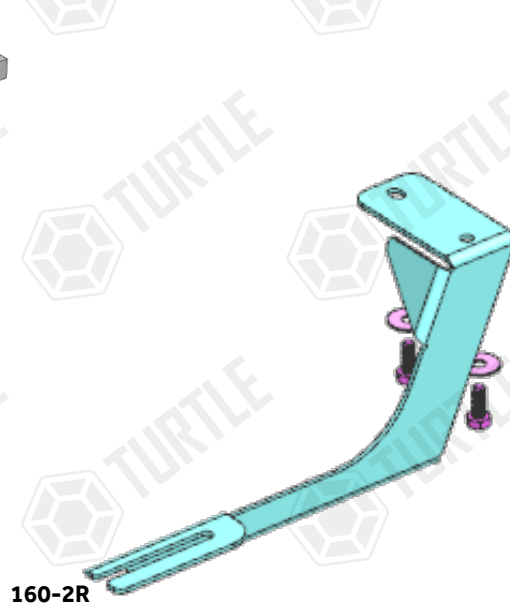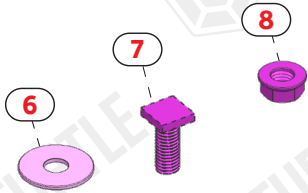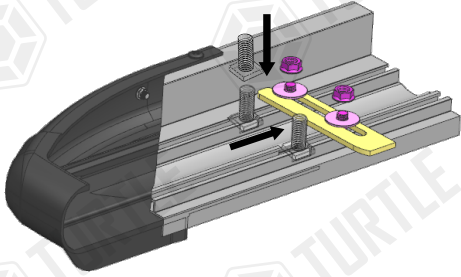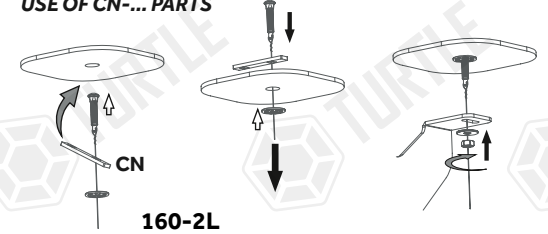


160-2R

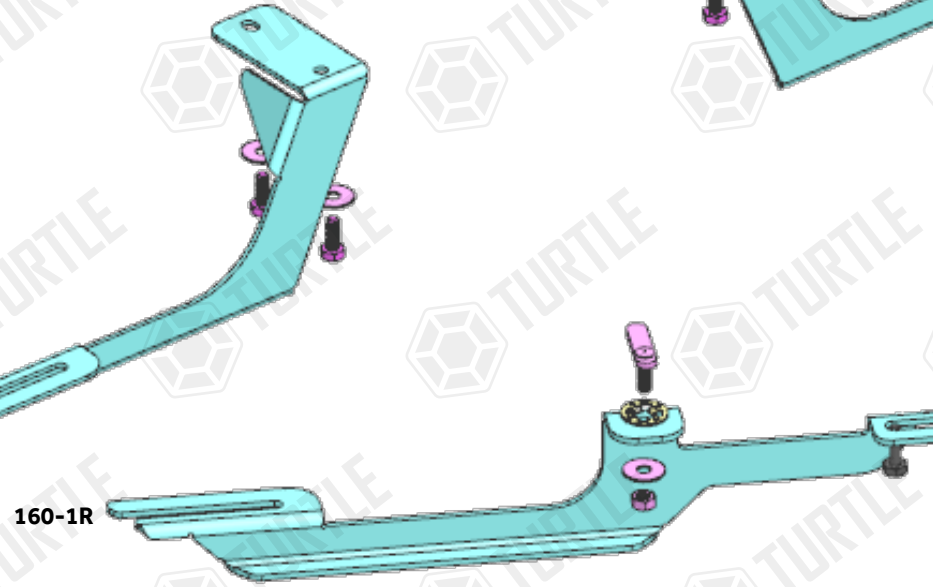

160-1R

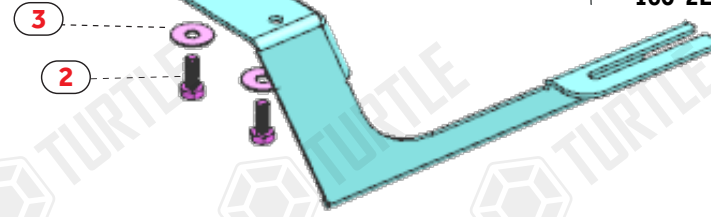

160-2L

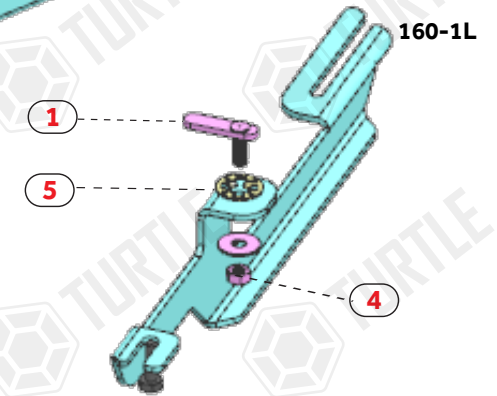

160-1L

PACKAGE INCLUDED

1- CN-17 M8	2
2- M8x20 HEX BOLT	4
3- M8 WASHER	6
4- M8 HEX NUT	2
5- CLAMPING PIECE	2
6- D8 WASHER	8
7- M8x20 SQUARE BOLT	8
8- M8 FLANGE NUT	8

ZIPLOCK BAG

