



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)




Product Code: MB01170 (A TYPE)

MB02170 (B TYPE)

COMPATIBLE VEHICLES

NSS QSHQ (J12) 21- 5dr SUV

USE OF CN-... PARTS

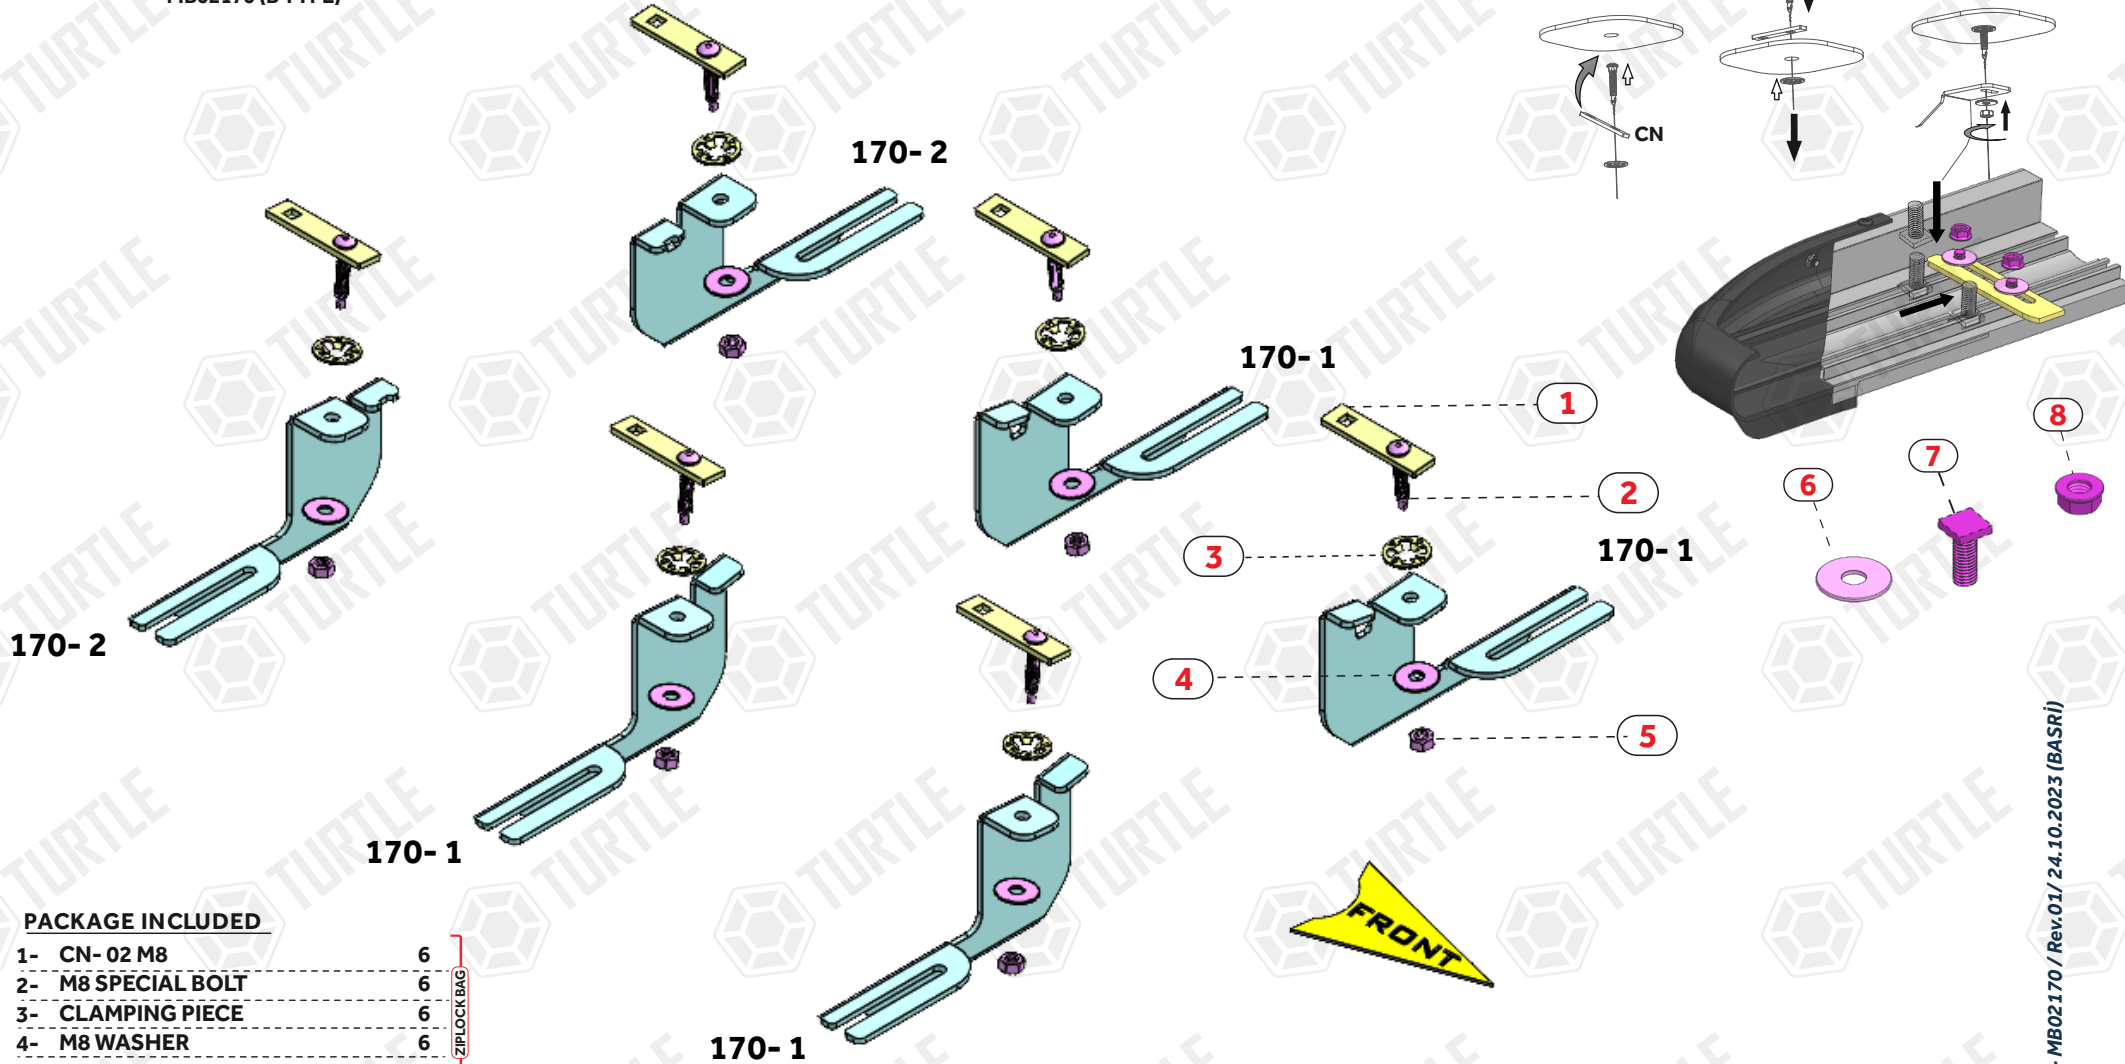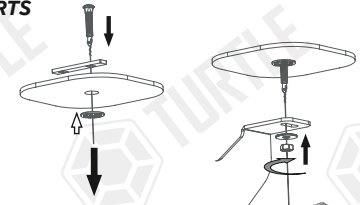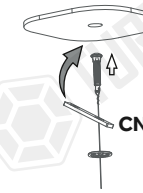

PACKAGE INCLUDED

1- CN- 02 M8	6	ZIPLOCK BAG
2- M8 SPECIAL BOLT	6	
3- CLAMPING PIECE	6	ZIPLOCK BAG
4- M8 WASHER	6	
5- M8 HEX NUT	6	ZIPLOCK BAG
6- D8 WASHER	12	
7- M8x20 SQUARE BOLT	12	ZIPLOCK BAG
8- M8 FLANGE NUT	12	