



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION




ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05166 (A/B-TYPE)

COMPATIBLE VEHICLES

KI SPRTG (NQ5) SUV 22-

USE OF CN-... PARTS

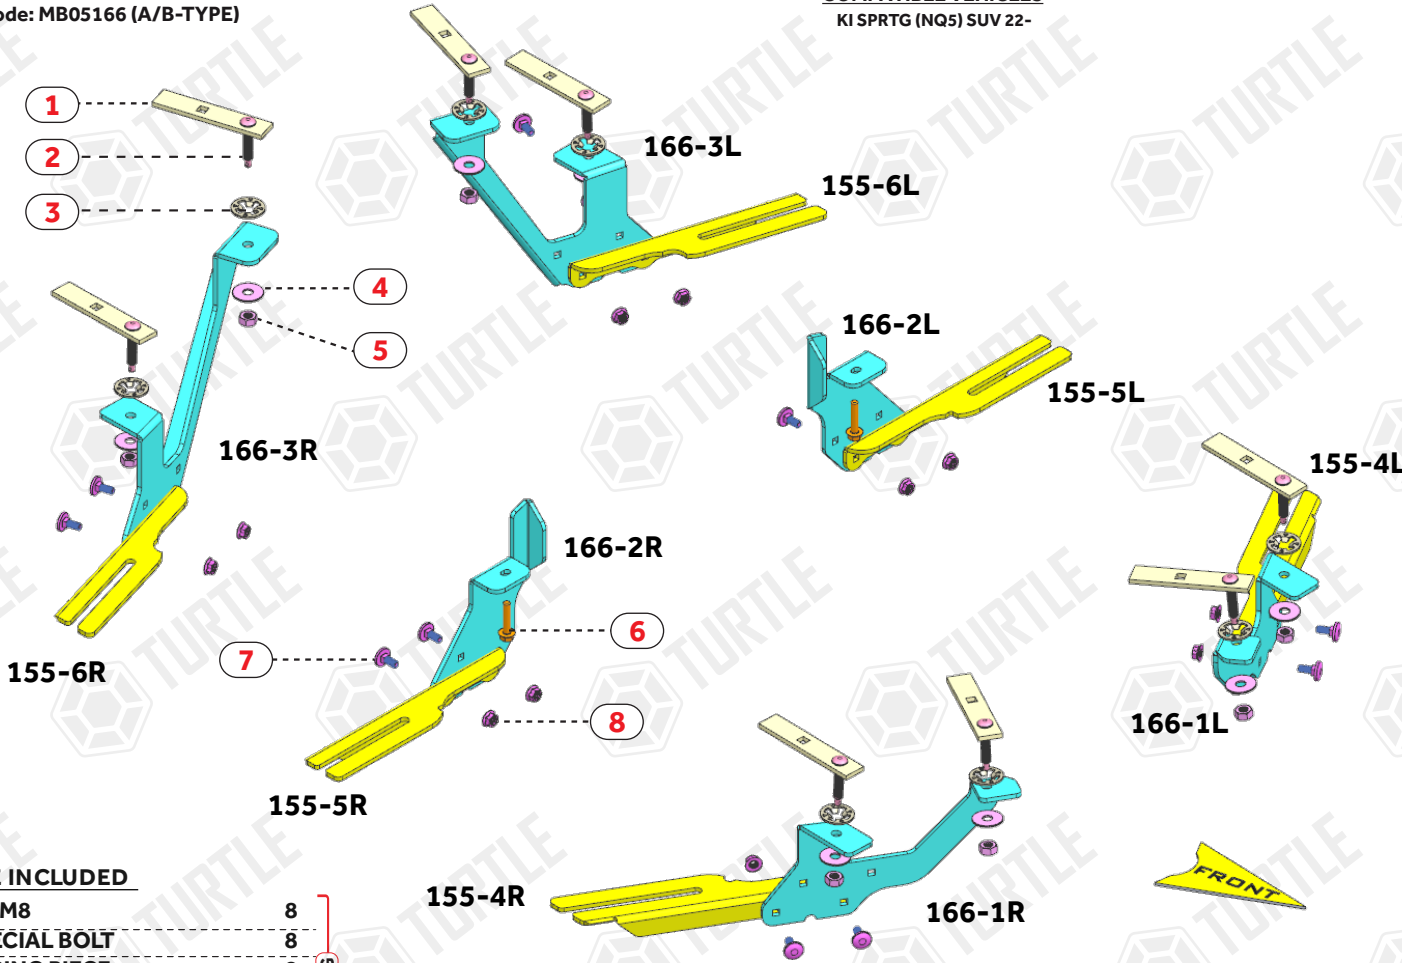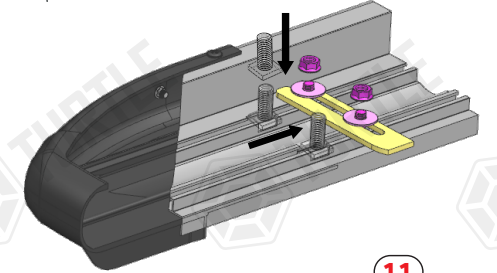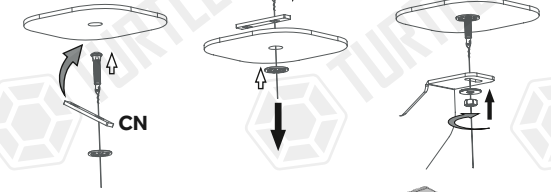

PACKAGE INCLUDED

1- CN-03 M8	8	ZIP LOCK BAG
2- M8 SPECIAL BOLT	8	
3- CLAMPING PIECE	8	
4- D8 WASHER	8	
5- M8 HEX NUT	8	
6- M6x30 FLANGE HEX BOLT	2	
7- M6x15 LOCK HEADED BOLT	12	
8- M6 HEX FLANGE NUT	12	
9- D8 WASHER	12	
10- M8x20 SQUARE BOLT	12	
11- M8 FLANGE NUT	12	


Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / **Type E** (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

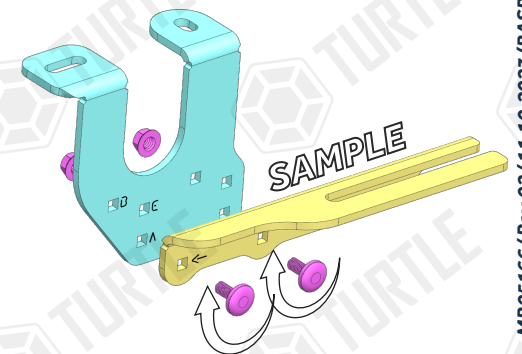

MB05166/ Rev.02/ 11.10.2023 (BASRI)