



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05177(A/B TYPE)



COMPATIBLE VEHICLES

CTRN C4 20- 5dr SUV

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

USE OF CN-... PARTS

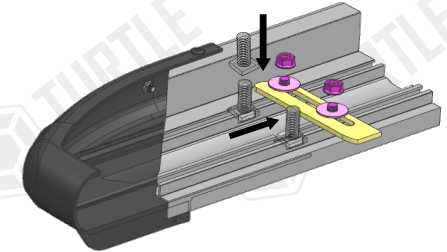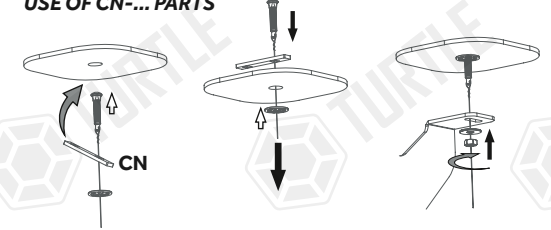

PACKAGE INCLUDED

1- CN-03 M8	2
2- CN-34 M8	2
3- M8x25 HEX BOLT	4
4- CLAMPING PIECE	4
5- M8 SPECIAL BOLT	2
6- D8 WASHER	12
7- M8 HEX NUT	12
8- M6x15 LOCK HEADED BOLT	8
9- M6 HEX FLANGE NUT	8
10- D8 WASHER	8
11- M8X20 SQUARE BOLT	8
12- M8 FLANGE NUT	8

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)
Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

