



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code:Product Code: MB05152 (A/B-TYPE)


COMPATIBLE VEHICLES

SZK ESCD (LY) SUV 15-
SZK VTR (LY) SUV 15-
SZK SX4 SUV 22-
SZK S-CRSS SUV 22-

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

USE OF CN-... PARTS

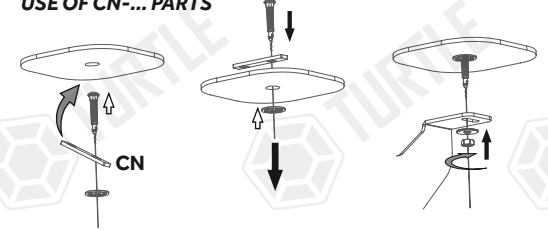


Aracınız;

**SX4/S Cross ise 152-4L/R nolu parçaları kullanınız,
SX4/S Cross değil ise 152-4L/R nolu parçaları kullanmayınız.**

Your vehicle;

If it's SX4/S Cross, use parts 152-4L/R

If it's not SX4/S Cross, not use parts 152-4L/R

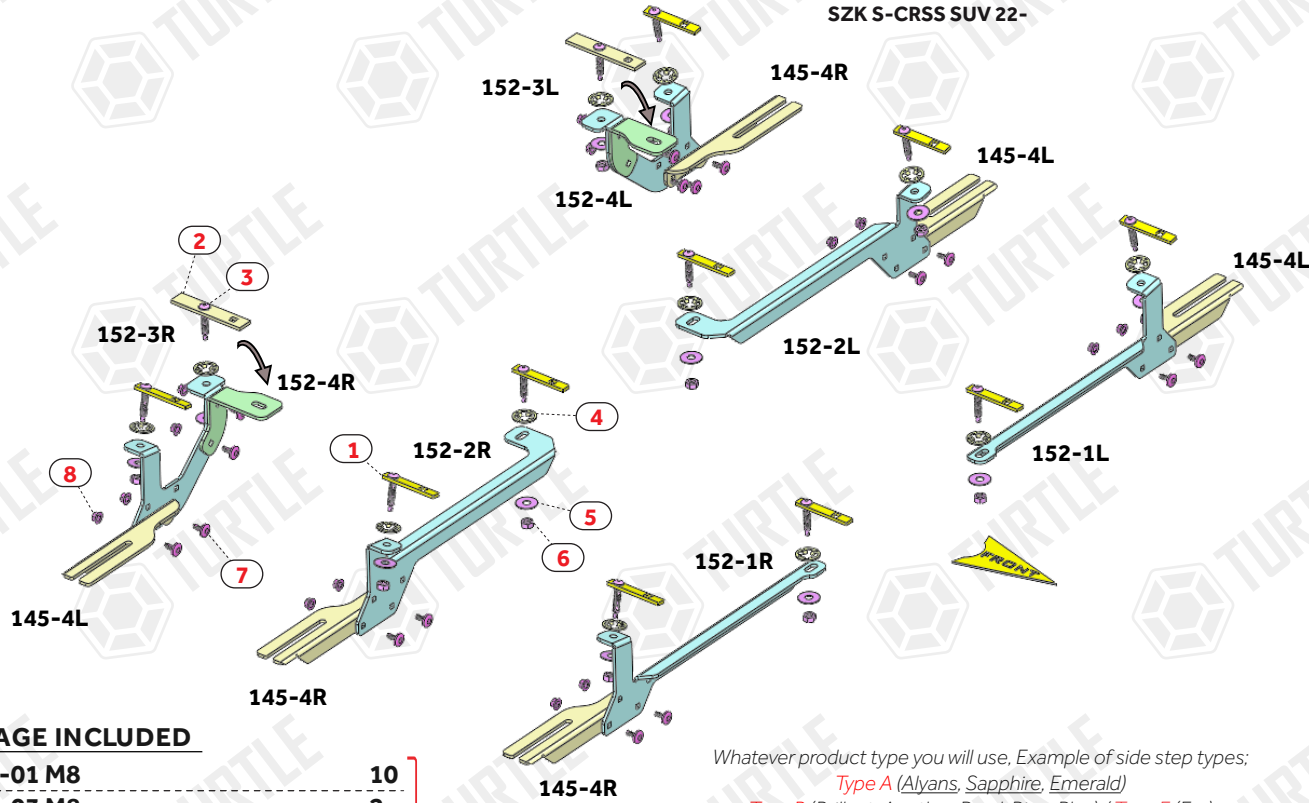

PACKAGE INCLUDED

1- CN-01 M8	10
2- CN-03 M8	2
3- M8 SPECIAL BOLT	12
4- CLAMPING PIECE	12
5- D8 WASHER	12
6- M8 HEX NUT	12
7- M6x15 LOCK HEADED BOLT	16
8- M6 HEX FLANGE NUT	16
9- D8 WASHER	12
10- M8x20 SQUARE BOLT	12
11- M8 FLANGE NUT	12


Whatever product type you will use, Example of side step types:

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

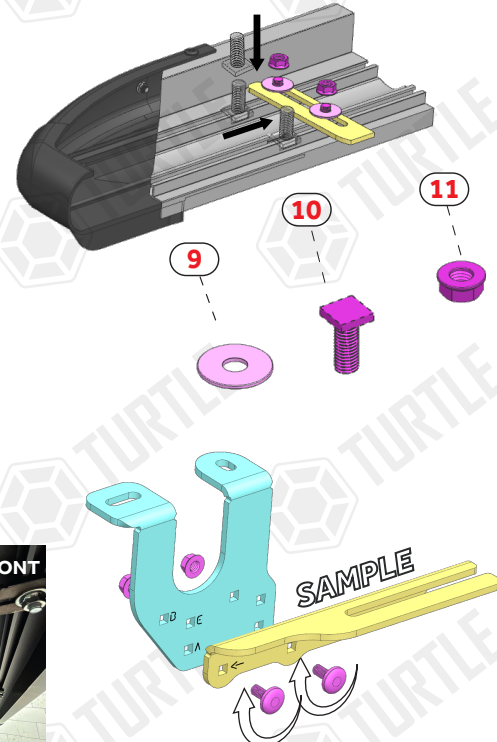

MB05152/ Rev.03/ 30.11.2023 (BASRI)