


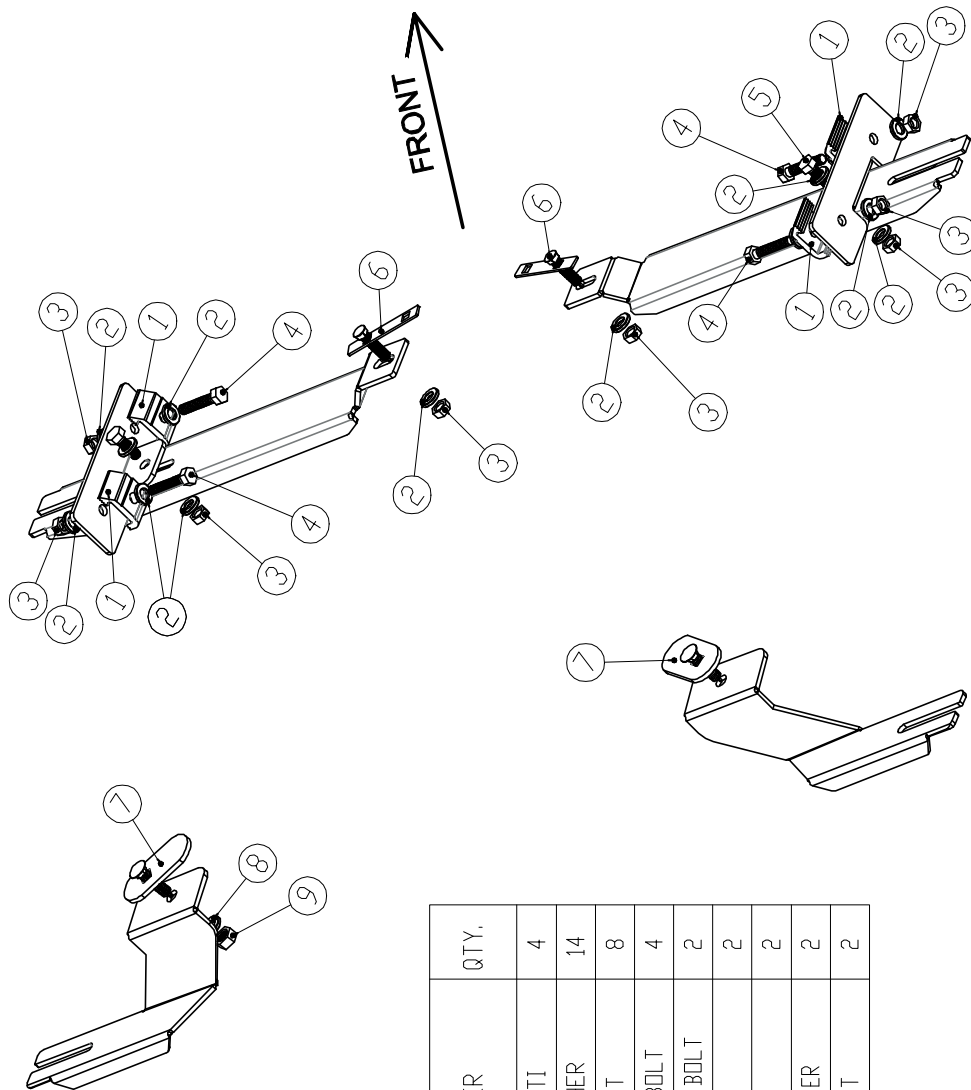


NO.	PART NUMBER	QTY.
1	SIKMA APARATI	4
2	M8 PUL WASHER	14
3	M8 SOMUN NUT	8
4	M8x40 CIVATA BOLT	4
5	M8x25 CIVATA BOLT	2
6	CN_01	2
7	CN_34	2
8	M10 PUL WASHER	2
9	M10 SOMUN NUT	2



DACIA SANDERO 2008 > SIDE STEPS

- | | |
|--------------------------------|-------------------------------|
| (TR) MONTAJ TALİMATLARI | (D) EINBAUANLEITUNG |
| (F) INSTRUCTIONS DE MONTAGE | (ENG) MOUNTING INSTRUCTIONS |
| (GB) FITTING INSTRUCTIOS | (CZ) POKYNY PRO MONTAZ |
| (ESP) INSTRUCCIONES DE MONTAJE | (SWE) MONTAGEANVISNING |
| (P) INSTRUÇÕES DE MONTAGEM | (SLO) NAVODILA ZA INSTALACIJO |
| (H) FELSZERESLESI UTASITAS | (NL) MONTAGEHANDLEIDING |
| (PL) INSTRUCJE WBUDOWANIA | (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ |

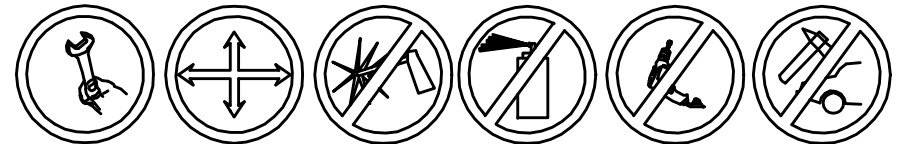

COMPANY

CAN OTOMOTİV İNŞ. İTH. İHR. SAN.
ve TİC. LTD. ŞTİ.
Veli köy Organize Sanayi Bölgesi
4. Cadde NO:20/A
ÇERKEZKÖY/TEKİRDAĞ
Tel : +90 282 746 1320
www.canotomotiv.com.tr


FRONT BRACKET



REAR BRACKET




FRONT BRACKET

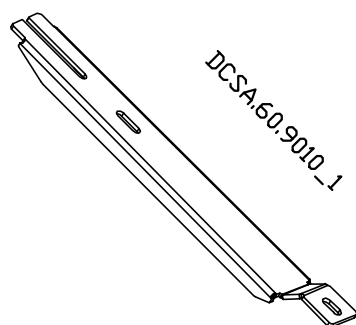


RIGHT-LEFT X1

FRONT BRACKET

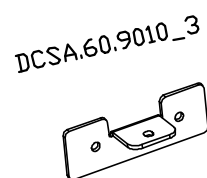

RIGHT-LEFT X1

REAR BRACKET

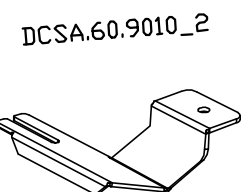

RIGHT-LEFT X1