



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01098 (A-TYPE)


MB02098 (B-TYPE)

COMPATIBLE VEHICLES



REN CPTR (J87) SUV 13-19

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

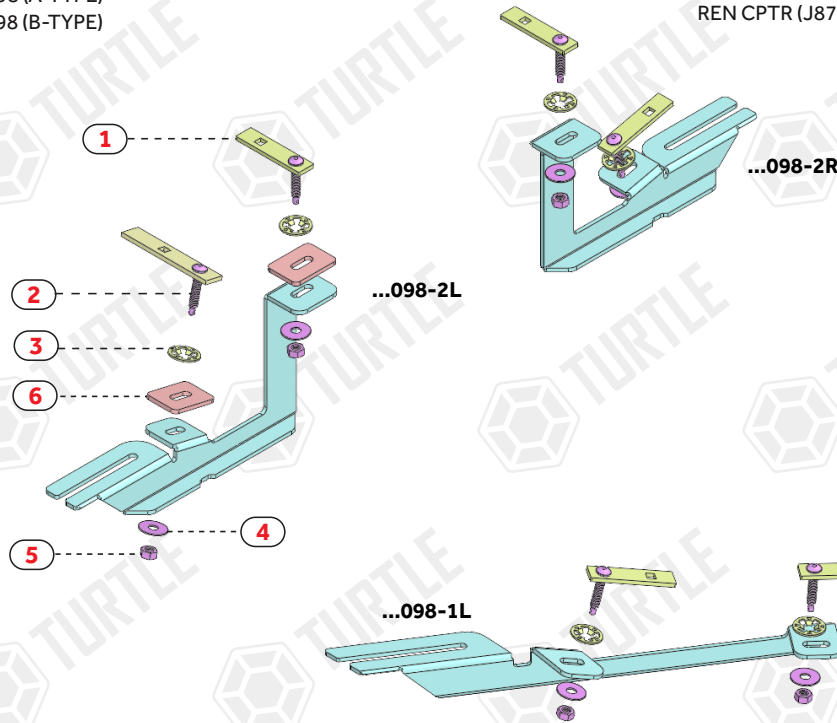

USE OF CN-... PARTS

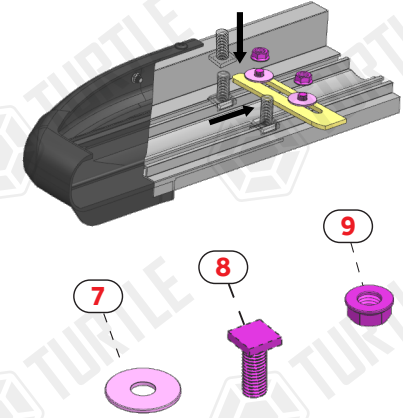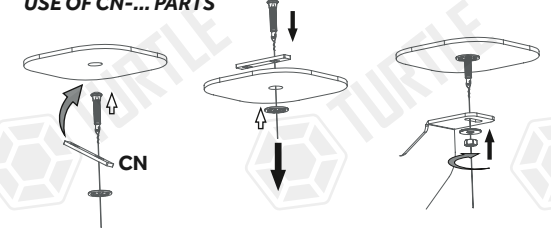


PACKAGE INCLUDED

1- CN-02 M8	12	ZIP LOCK BAG
2- M8 SPECIAL BOLT	12	
3- CLAMPING PIECE	12	
4- M8 WASHER	12	
5- M8 HEX NUT	12	
6- 098-3 BRACKET	2	
7- D8 WASHER	8	ZIP LOCK BAG
8- M8x20 SQUARE BOLT	8	
9- M8 FLANGE NUT	8	



REAR

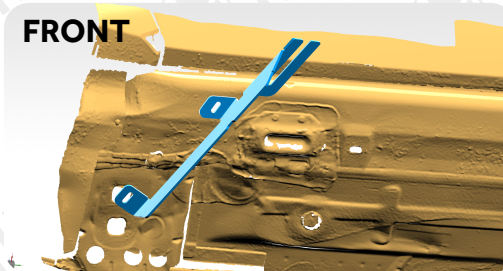

FRONT